

MULTIPLE COMPACT DISC PLAYER

DP-R896


SERVICE MANUAL

KENWOOD

© 1995-11 PRINTED IN KOREA
B51-5124-00 (K) 1583

Knob (POWER)
(K27-2112-04)


Metallic cabinet
(A01-3103-11)

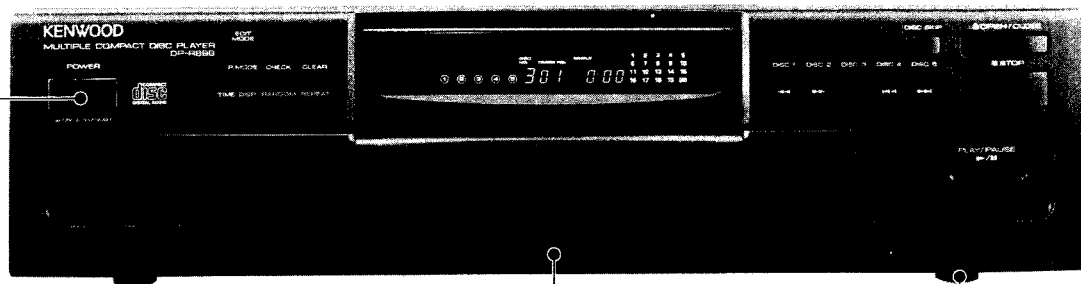

Panel assy
(A60-0872-02)

Foot
(J02-0366-15)

AC power cord *
(E30-)

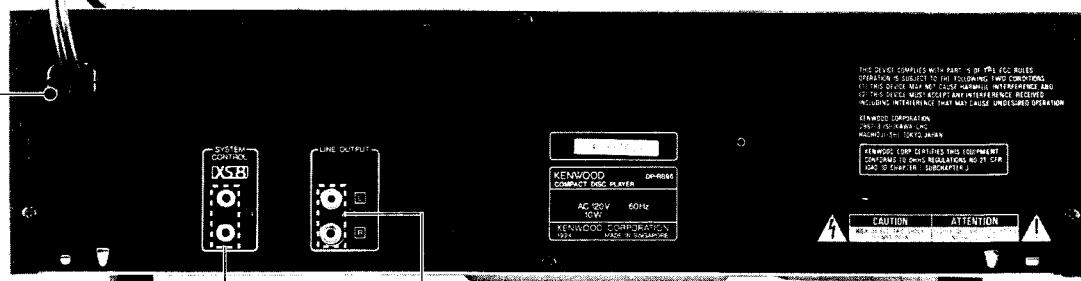

Powercord bushing
(J42-0083-05)

Miniature phone jack (2p)
(E11-0188-05)

Phono jack (2p)
(E63-0068-15)

In compliance with Federal Regulations, following are reproductions of labels on, or inside the product relating to laser product safety.

KENWOOD-Corp. certifies this equipment conforms to DHHS Regulations No. 21 CFR 1040. 10, Chapter 1, Subchapter J.

**DANGER : Laser radiation when open and interlock defeated.
AVOID DIRECT EXPOSURE TO BEAM.**

* Refer to parts list on page 22.


DP-R896

CONTENTS / ACCESSORIES / CAUTION

ACCESSORIES/CAUTION	2	SCHEMATIC DIAGRAM	11
CONTROLS	3	EXPLODED VIEW (MECHANISM)	19
DISASSEMBLY FOR REPAIR	4	EXPLODED VIEW (UNIT)	20
ADJUSTMENT	5	PARTS LIST	22
PC BOARD	7	SPECIFICATIONS	Back cover

For "CIRCUIT DESCRIPTION", refer to the Service Manual of DP-R894.

Accessories

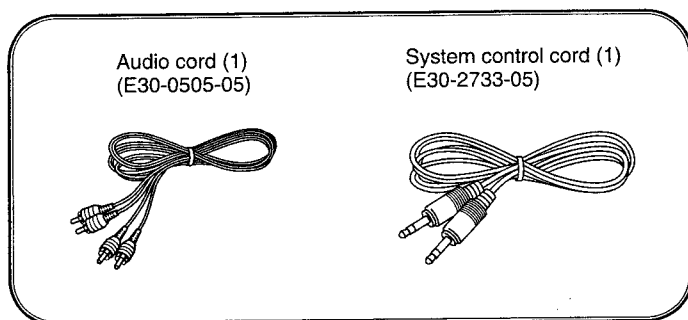


Caution




Note related to transportation and movement

Before transporting or moving this unit, carry out the following operations.

1. Turn the power ON but do not load a disc.
2. Wait a few seconds and verify that the display shown appears.
Wait further a few seconds.
3. Turn the power OFF.



CONTROLS

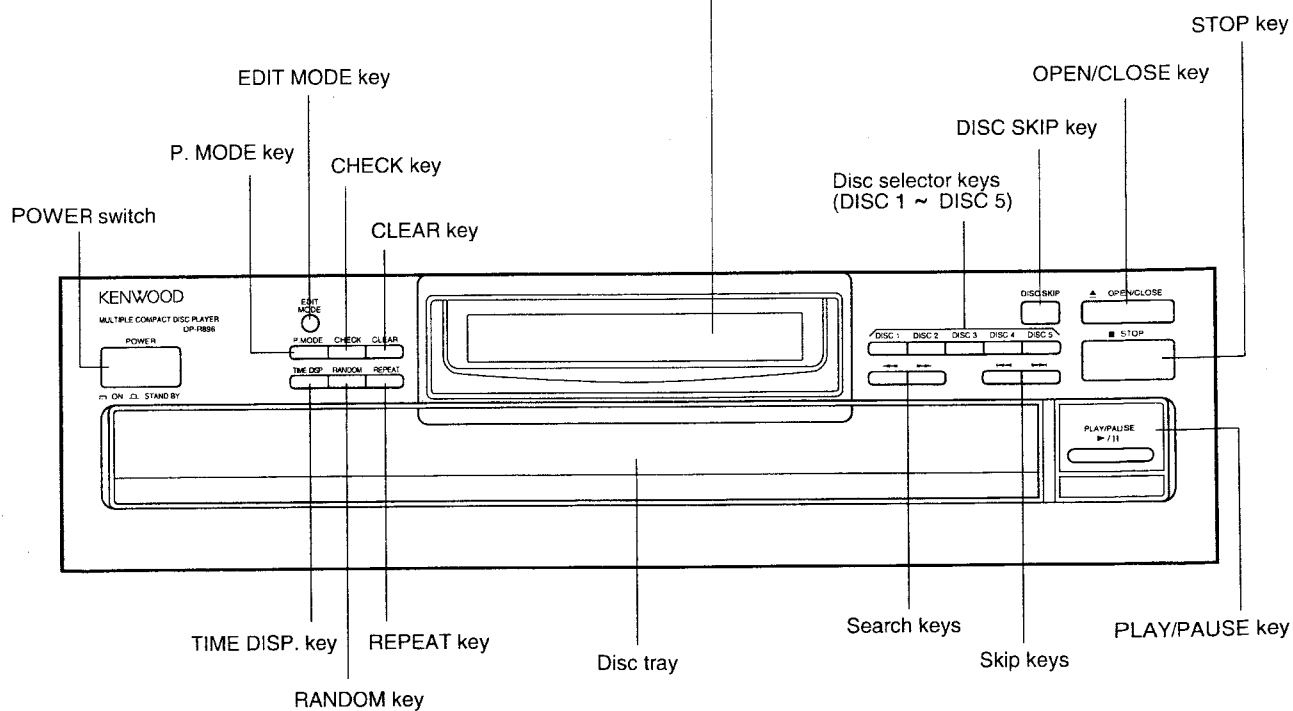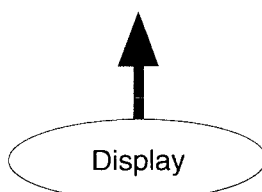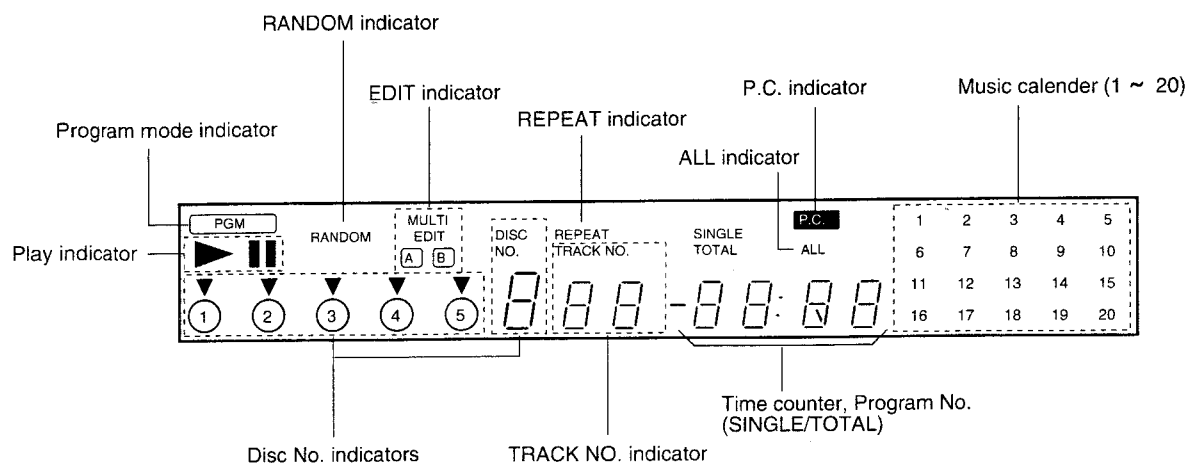


DP-R896

DISASSEMBLY FOR REPAIR


* Remove the metallic cabinet before the following procedure.

1. How to Remove the Tray and Tray panel


1. Turn the gear clockwise by hand (❶).
2. Remove the sensor (❷).

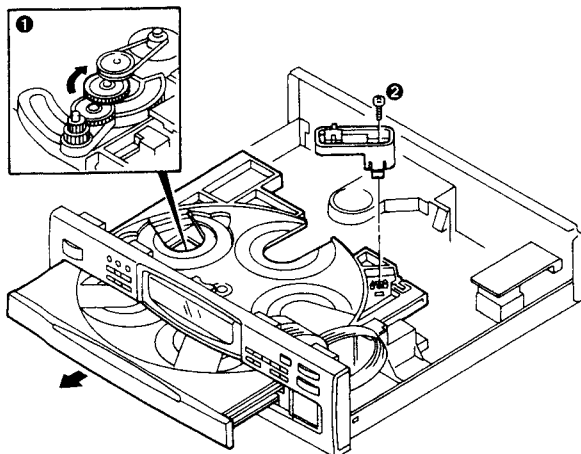


5. Remove screws (❺).
6. Move the gear ass'y to arrow mark (❻).
7. Remove connectors (❼) and the Pickup ass'y (❽).

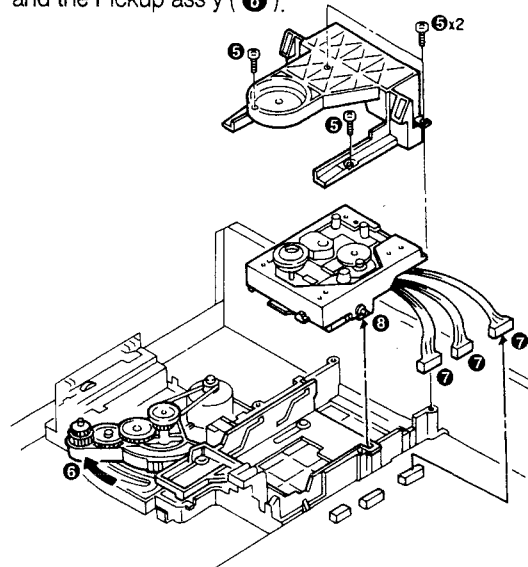

3. Remove the flexible cable (❸).
NOTE : Be careful of inserting the flexible cable as figure if reinsert it.
4. Pull out the rotary tray (❹).

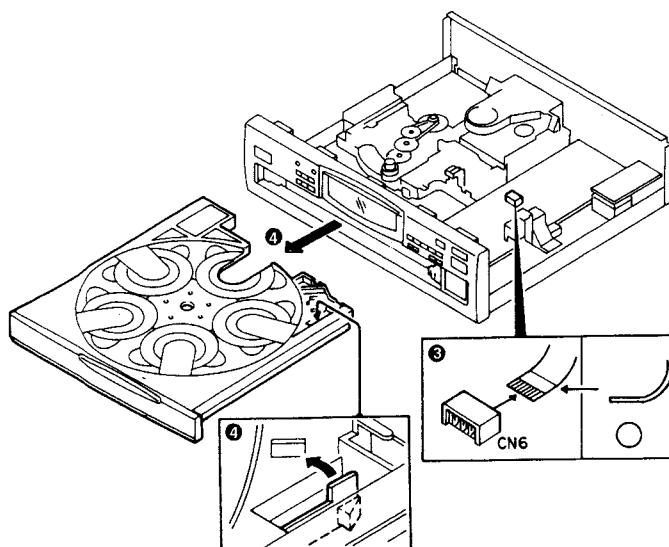

8. Remove screws (❾) and pull out the pickup ass'y.
NOTE : short-circuit the short lands of the pickup before pulling out it .
9. Remove the gear (❿).
10. Pull out the shaft (⓫) and lift up the pickup.

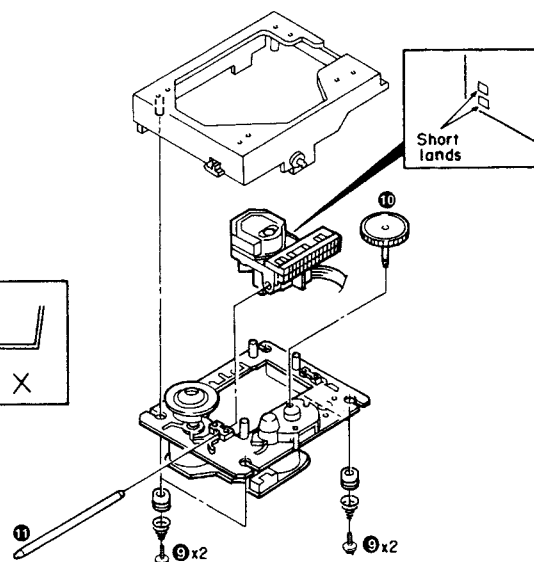

ADJUSTMENT

No.	ITEM	INPUT SET-TINGS	OUTPUT SETTINGS	PLAYER SETTINGS	ALIGNMENT POINTS	ALIGN FOR	FIG.
Remove the clamper ass'y before step 1. And remount it after step 1.							
1	LASER POWER	—	Set the sensor section of the optical power meter on the pickup lens.	With pressing the P.MODE key, turn the power on to enter the test mode. Press the CHECK key to check that the display is "03".	—	On the power from 0.08 to 0.15 mW, when the diffraction grating is correctly aligned with the RF level of 1.0Vp-p or more.	(a)
Cancel test mode and open the tray to load the disc.							
2	TRACKING ERROR	Test disc Type 4	Connect an oscilloscope as follows. CH1:RF (CN3-1) CH2:TE (CN3-6)	Load disc and set to test mode. Confirm the display is "03".	TE BALANCE VR4	Symmetry between upper and lower or $DC=0 \pm 0.025V$	(c)
3	FOCUS ERROR	Test disc Type 4	Connect an oscilloscope as follows. CH1:RF (CN3-1) CH2:TE (CN3-6)	Press the PLAY key. Confirm that the display is "05".	FE BALANCE VR1	Optimum eye pattern	(d)
4	FOCUS GAIN	Test disc Type 4 Apply signal of 1.0 kHz, 50mVrms to CN3 pin 2-3.	Connect a LPF to CN3 pin 2-3 to which connect an oscilloscope or AC voltmeters.	Press the PLAY key. Confirm that the display is "05".	FOCUS GAIN VR2	Two VTVMs should read the same value.	(e)
5	TRACKING GAIN	Test disc Type 4 Apply signal of 1.0 kHz, 50mVrms to CN3 pin 5-6.	Connect a LPF to CN3 pin 5-6 to which connect an oscilloscope or AC voltmeters.	Press the PLAY key. Confirm that the display is "05".	TRACKING GAIN VR3	Two VTVMs should read the same value.	(e)


Note:

Type 4 disc : SONY YEDS-18 Test Disc or equivalent.


LPF : Around 47 k Ω +390 pF or so.

Step 1 ~5 are in Test Mode.

(a) Laser power

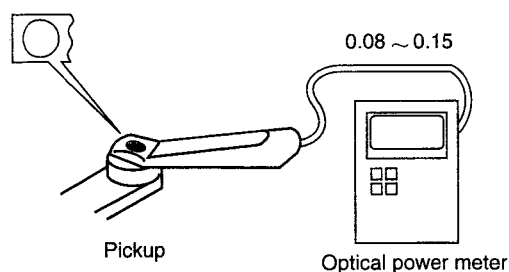


(e) Focus Gain, Tracking Gain

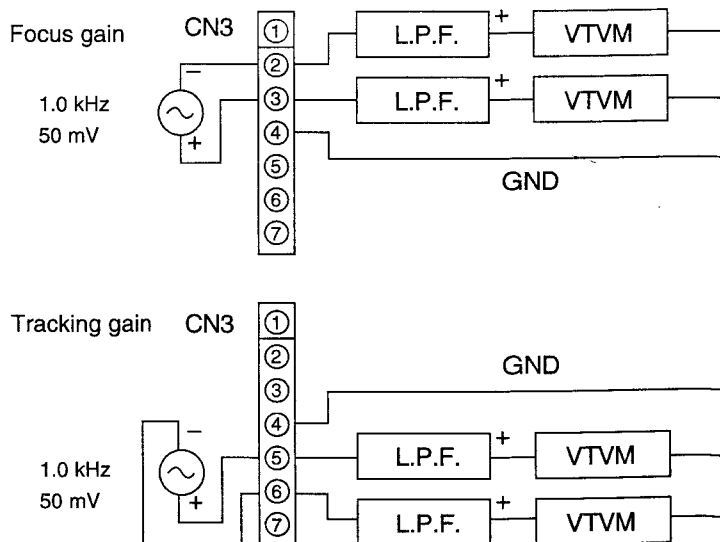

DP-R896


ADJUSTMENT

FIG.(b)

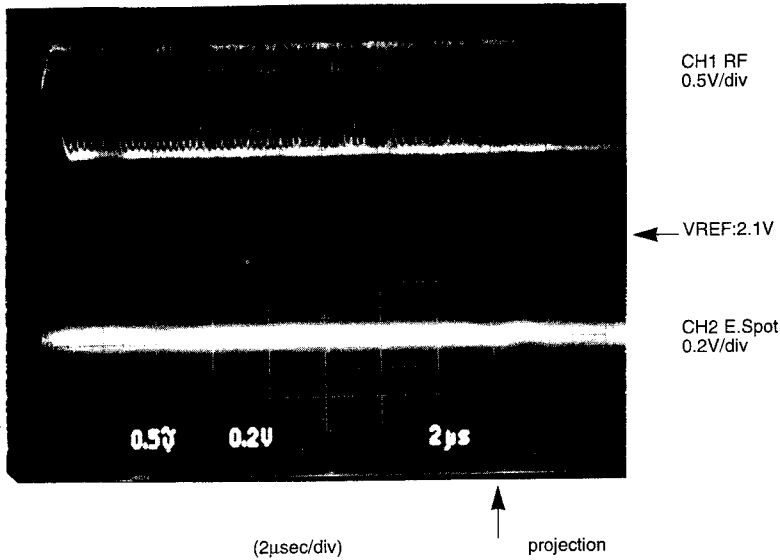


- RF signal and E.Spot signal in test mode (PLAY).
- If the diffraction grating has been adjusted properly, the influence of triggering is observed on the E.Spot waveform of approx. 18μs after RF signal in the form of a projection.

FIG.(c)

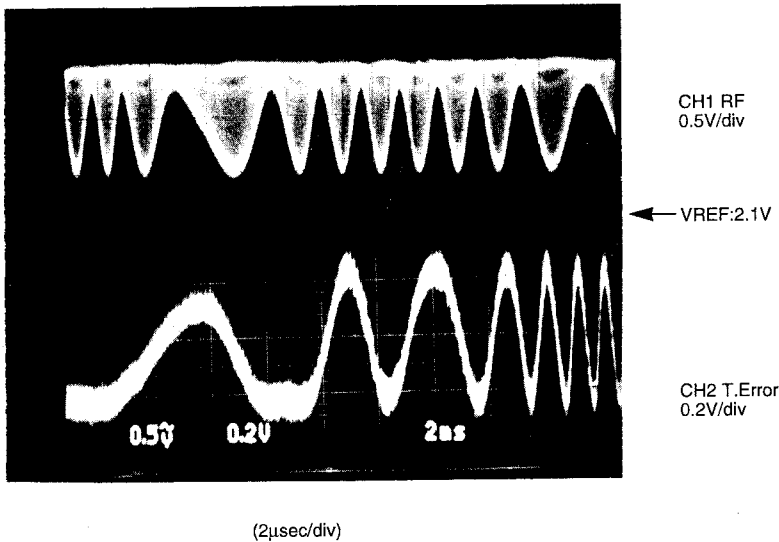

- RF signal and T.Error signal in test mode (Focusing ON). (Disc Type 4).
- Adjust T.Error so that the waveform is symmetrical above and below VREF(VR4).




FIG.(d)

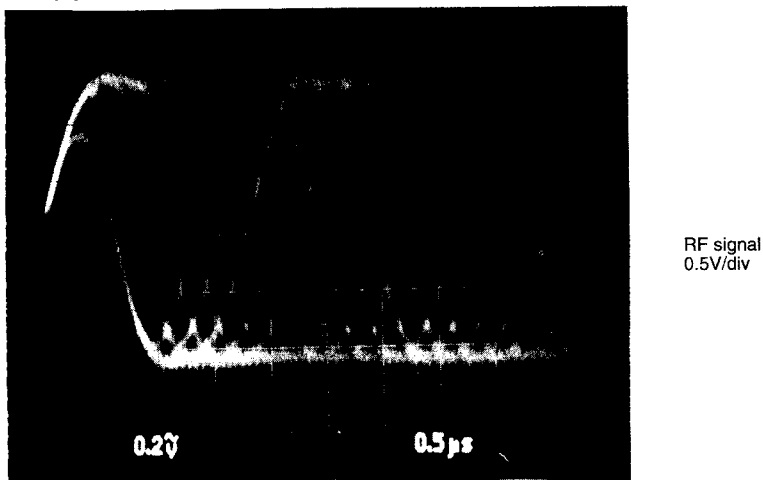


- RF signal in test mode (PLAY).
- Perform the tangential and focusing offset adjustments so that each of the center cross points are focused into one point on the display. The crossing points above and below the center shall also be displayed clearly.

PC BOARD(COMPONENT SIDE VIEW)


CD Player unit (NEC TYPE)
(X32-262X-XX) 0-10 : K, P, X
0-21 : Y

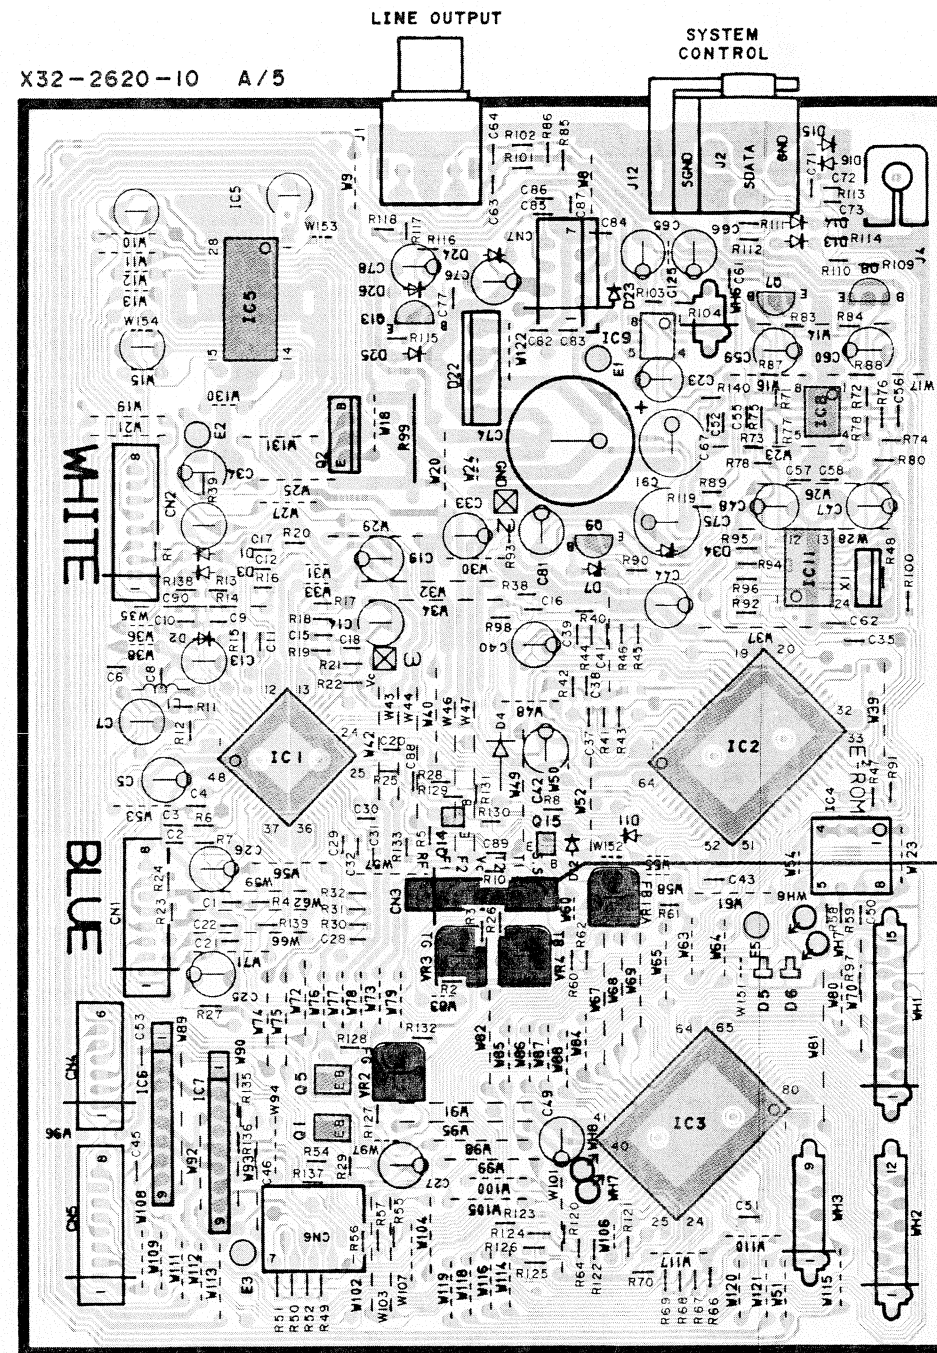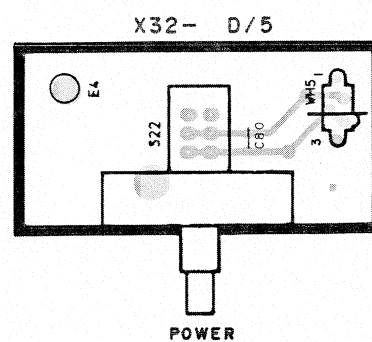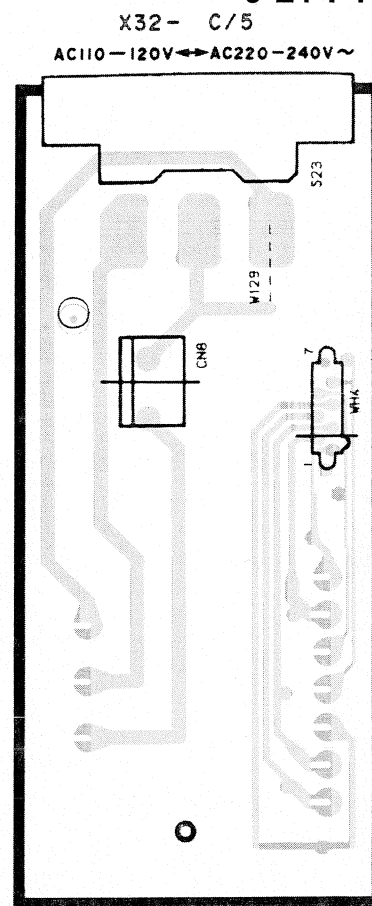

(e) Focus gain : Two VTVMs should read the same value.


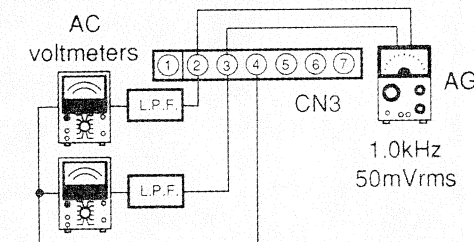


(e) Tracking gain : Two VTVMs should read the same value.

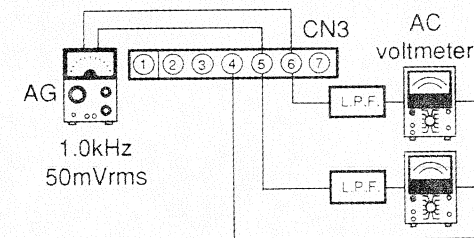

(c) Tracking error : Symmetry between upper and lower or DC=0±0.025V

(d) Focus error : Optimum eye pattern


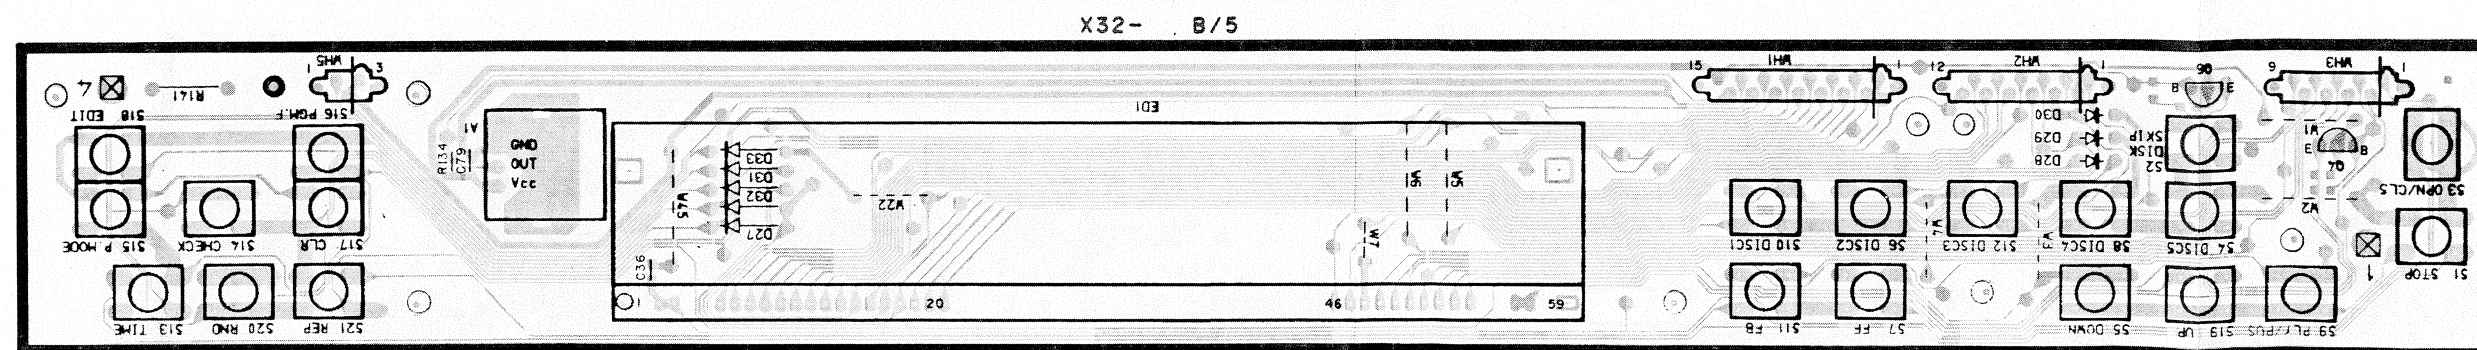
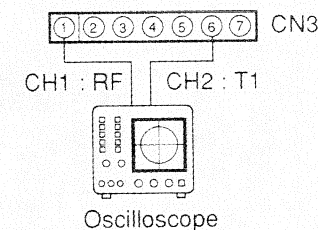


Refer to the schematic diagram for the value of resistors and capacitors.


PC BOARD(COMPONENT SIDE VIEW)

CD Player unit (MITSUBISHI TYPE)
(X32-262X-XX) 0-13 : K, P, X
0-24 : Y


X32- C/5
AC110-120V ↔ AC220-240V~

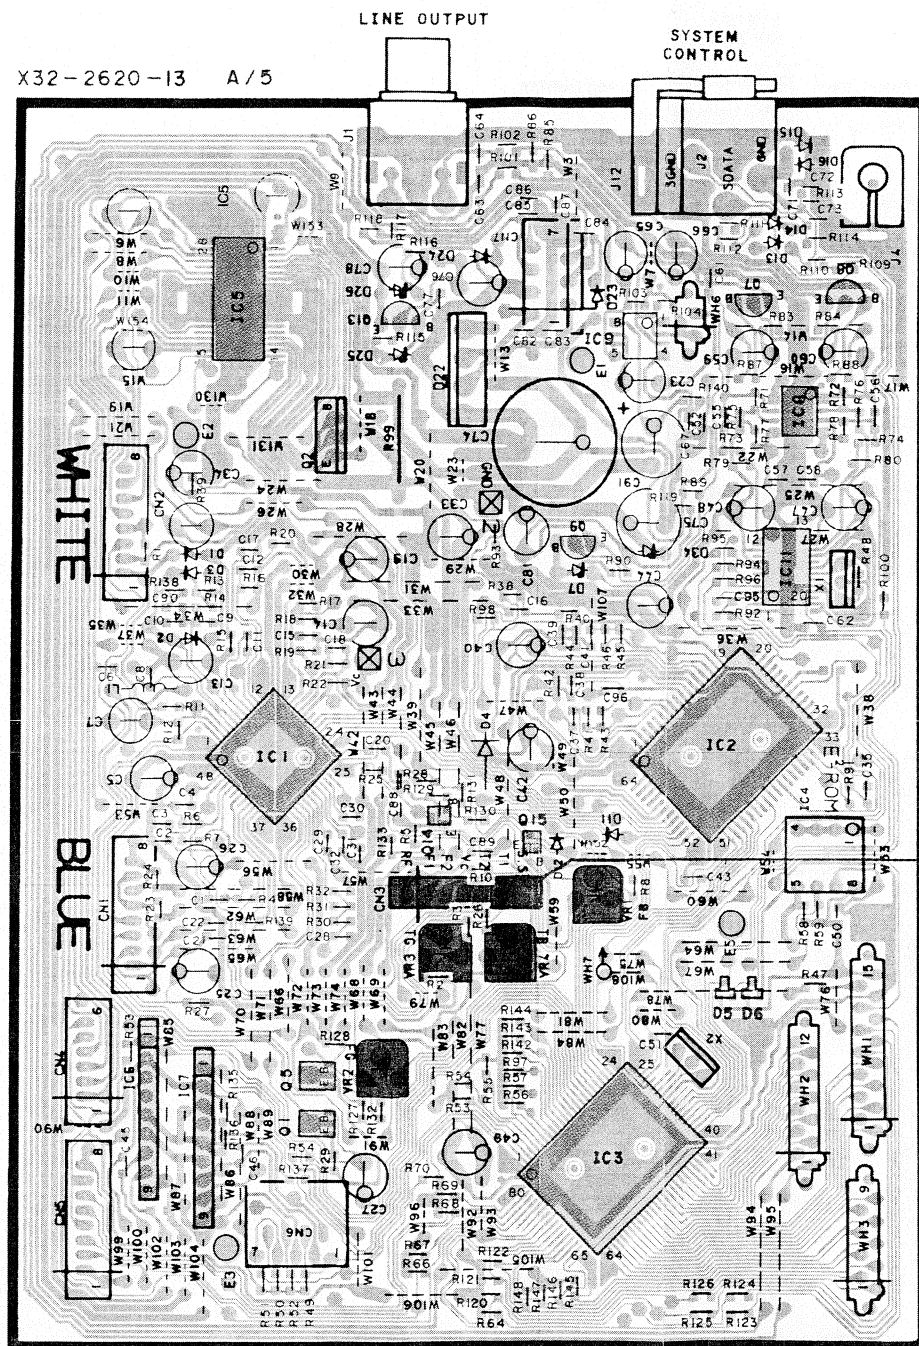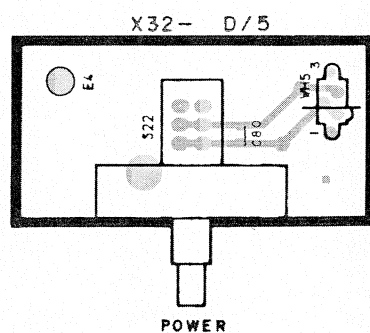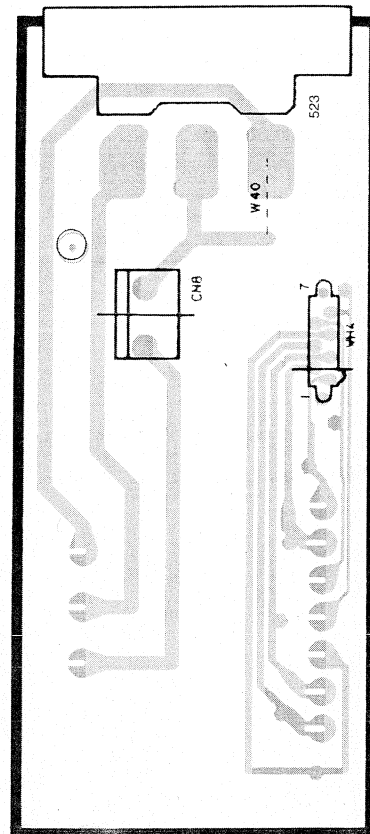

(e) Focus gain : Two VTVMs should read the same value.


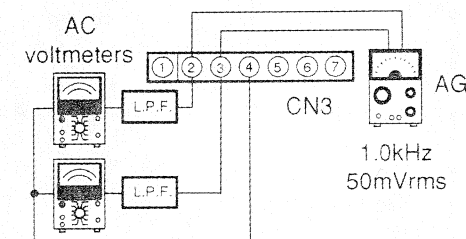


(e) Tracking gain : Two VTVMs should read the same value.

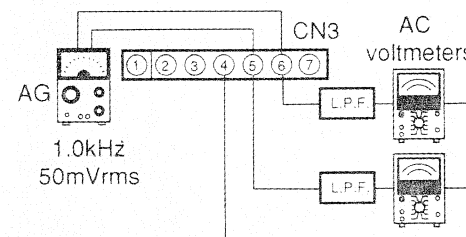


(c) Tracking error : Symmetry between upper and lower or $DC=0 \pm 0.025V$


(d) Focus error : Optimum eye pattern

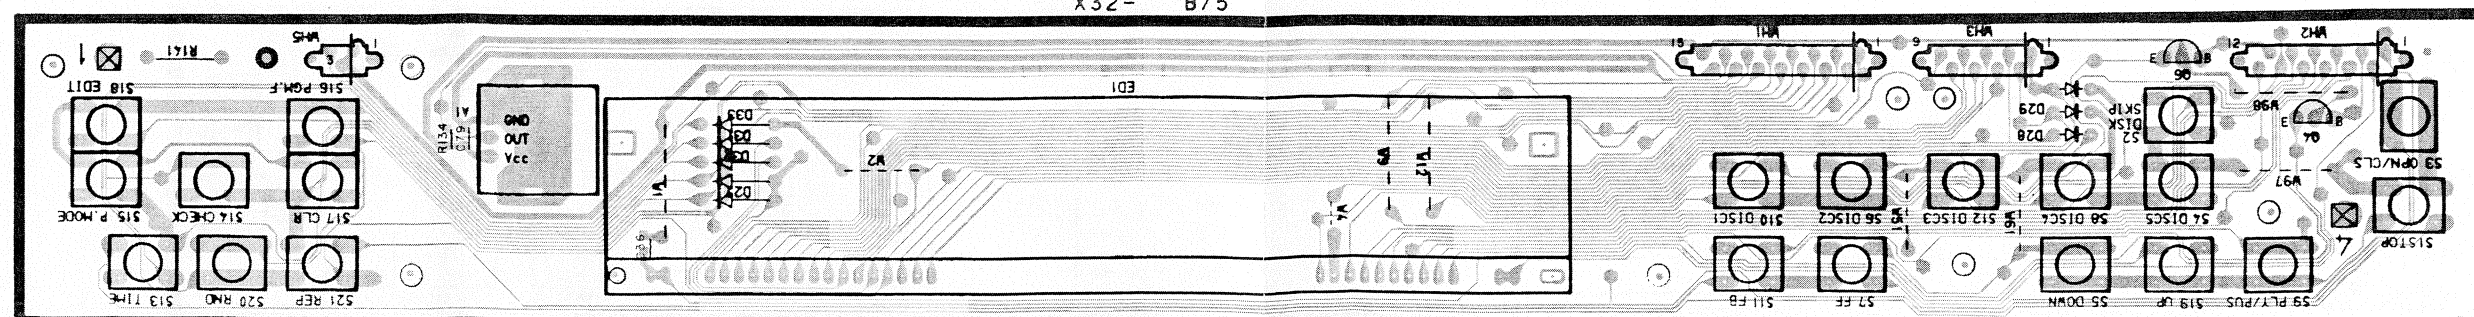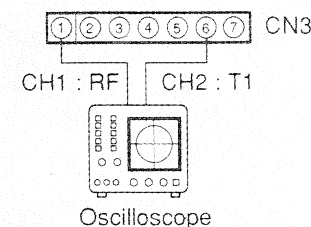

Refer to the schematic diagram for the value of resistors and capacitors.

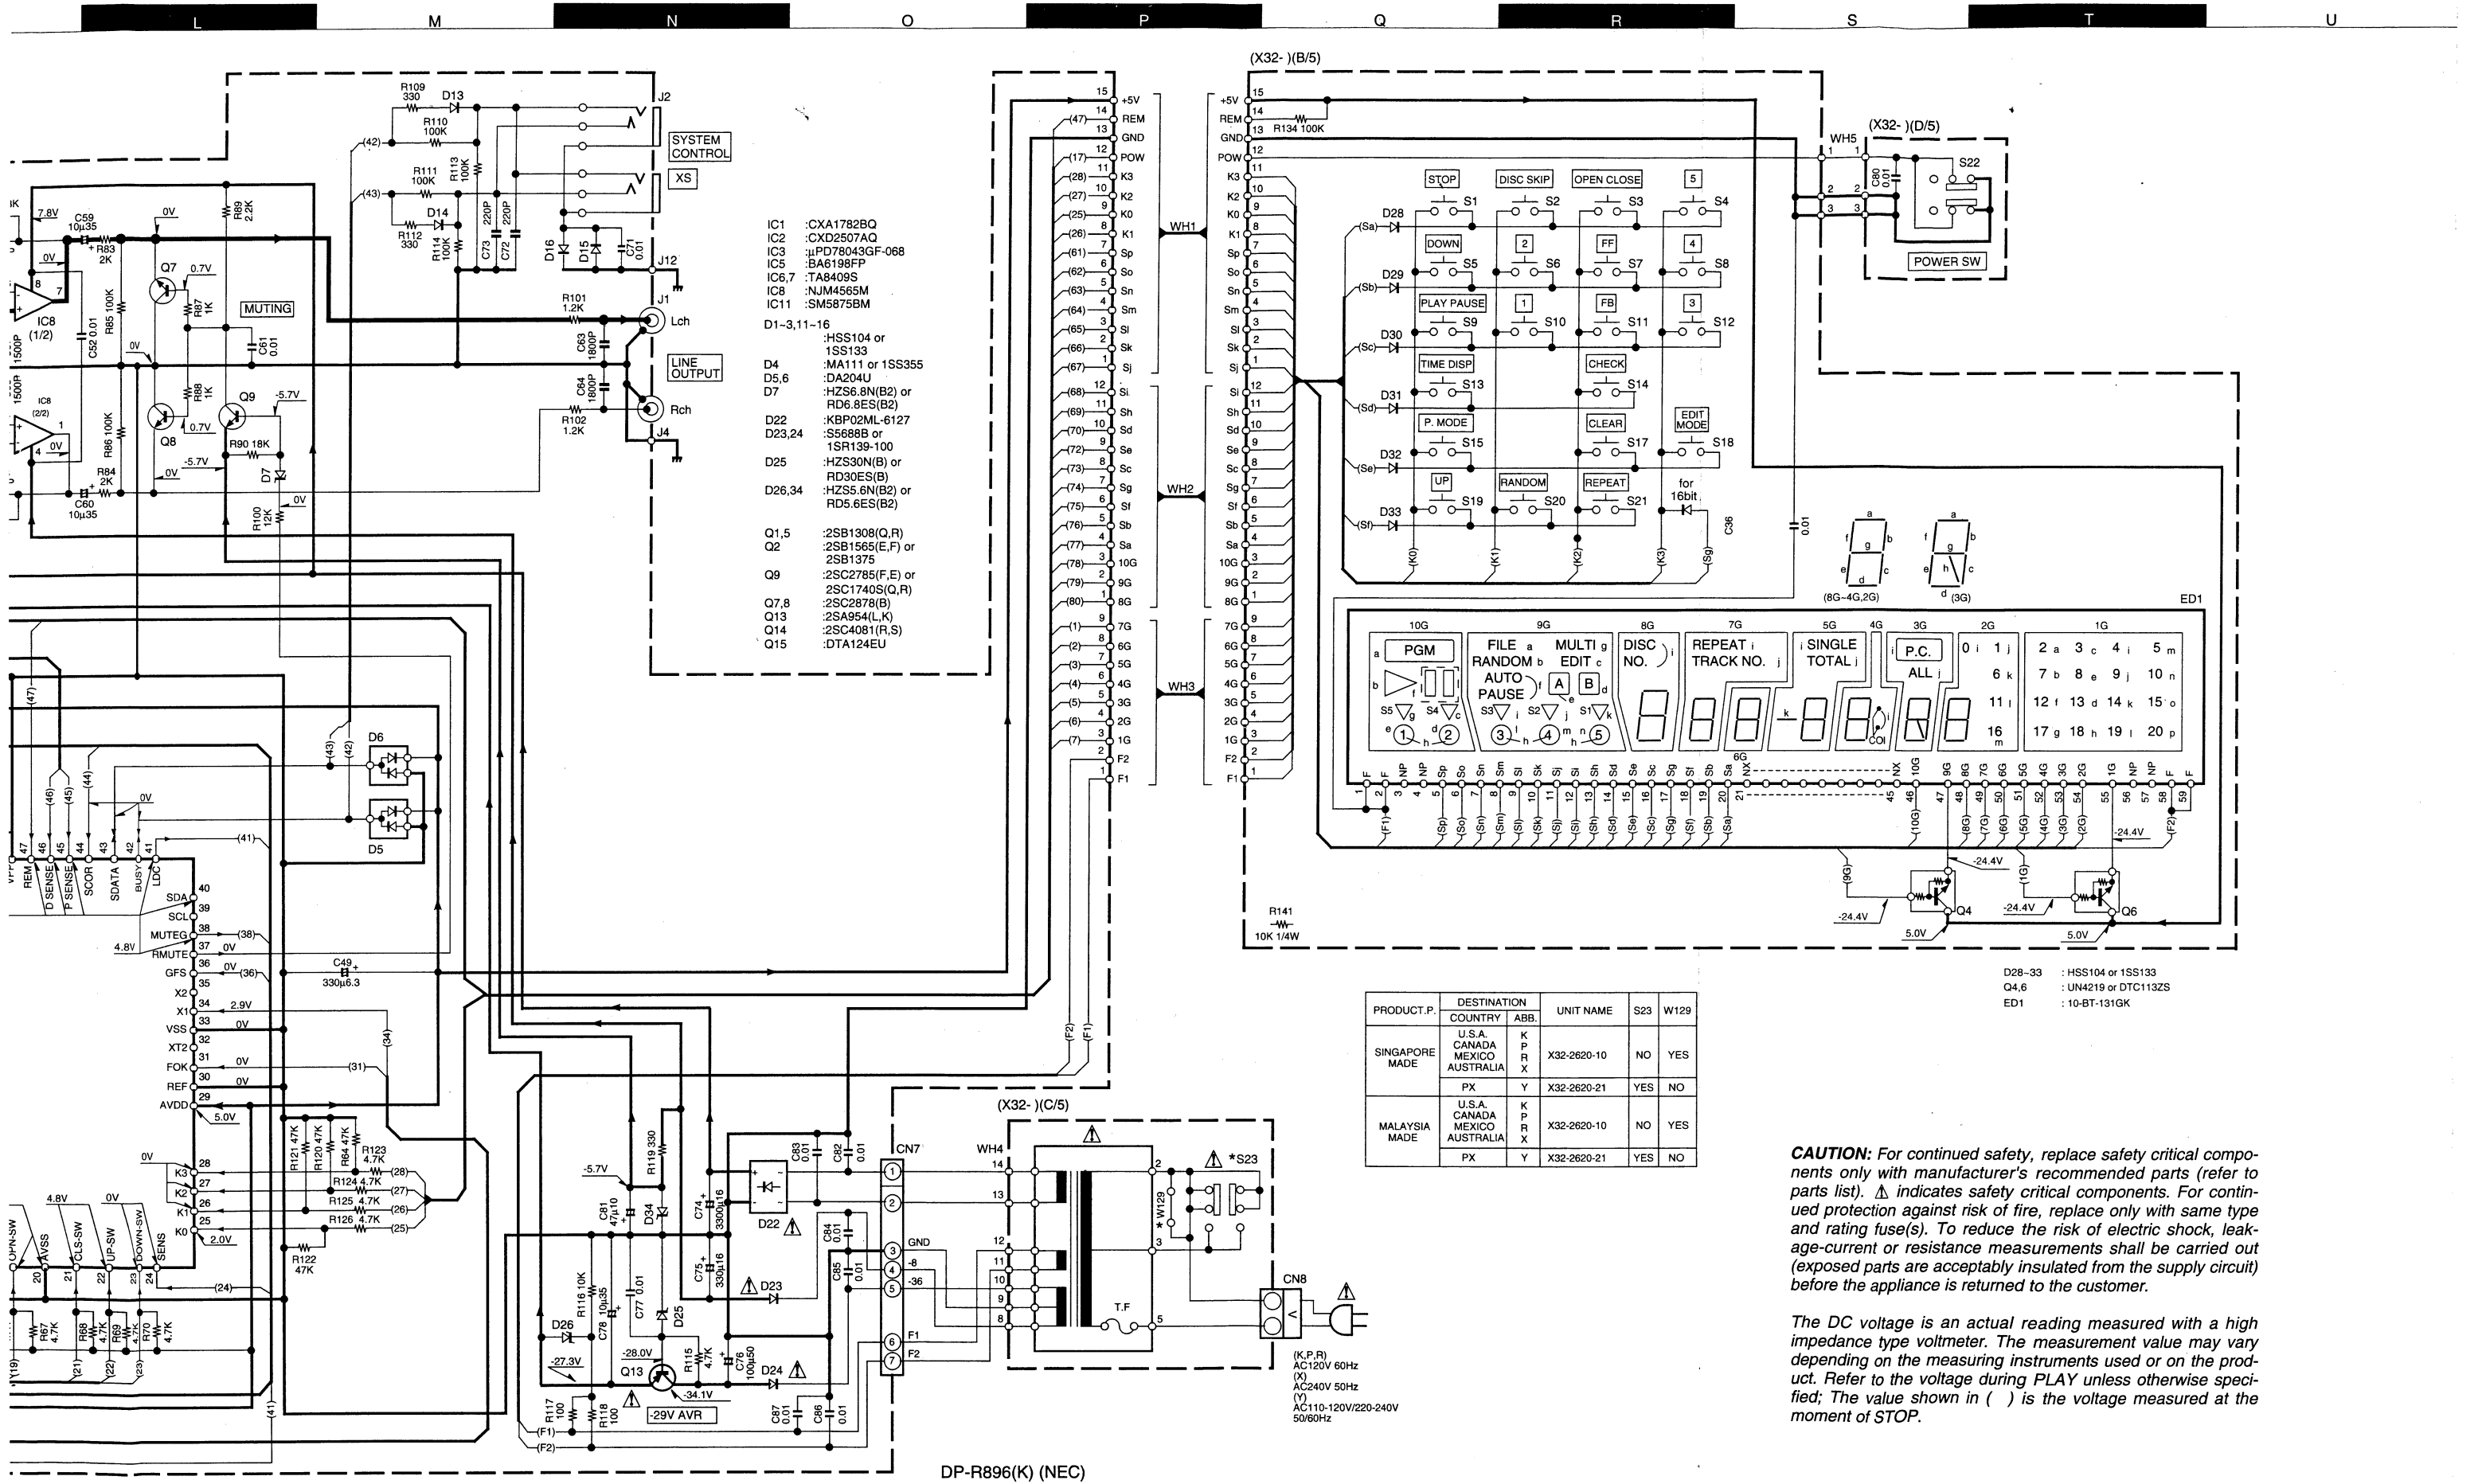



PRODUCT P.	DESTINATION	UNIT NAME	S23	W129
COUNTRY	ABB.			
SINGAPORE MADE	U.S.A. CANADA MEXICO AUSTRALIA	K P R X	X32-2620-10	NO YES
	PX	Y	X32-2620-21	YES NO
MALAYSIA MADE	U.S.A. CANADA MEXICO AUSTRALIA	K P R X	X32-2620-10	NO YES
	PX	Y	X32-2620-21	YES NO

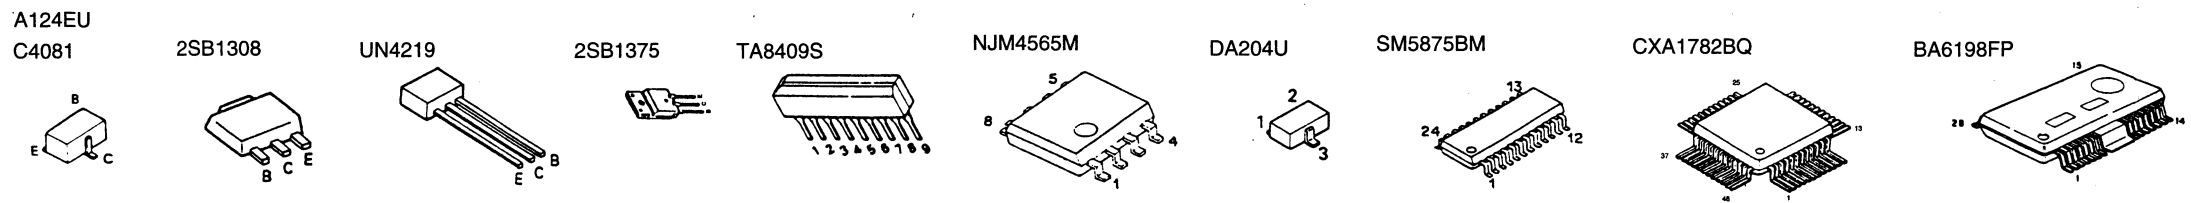

Y22-4450-10


DP-R896
KENWOOD



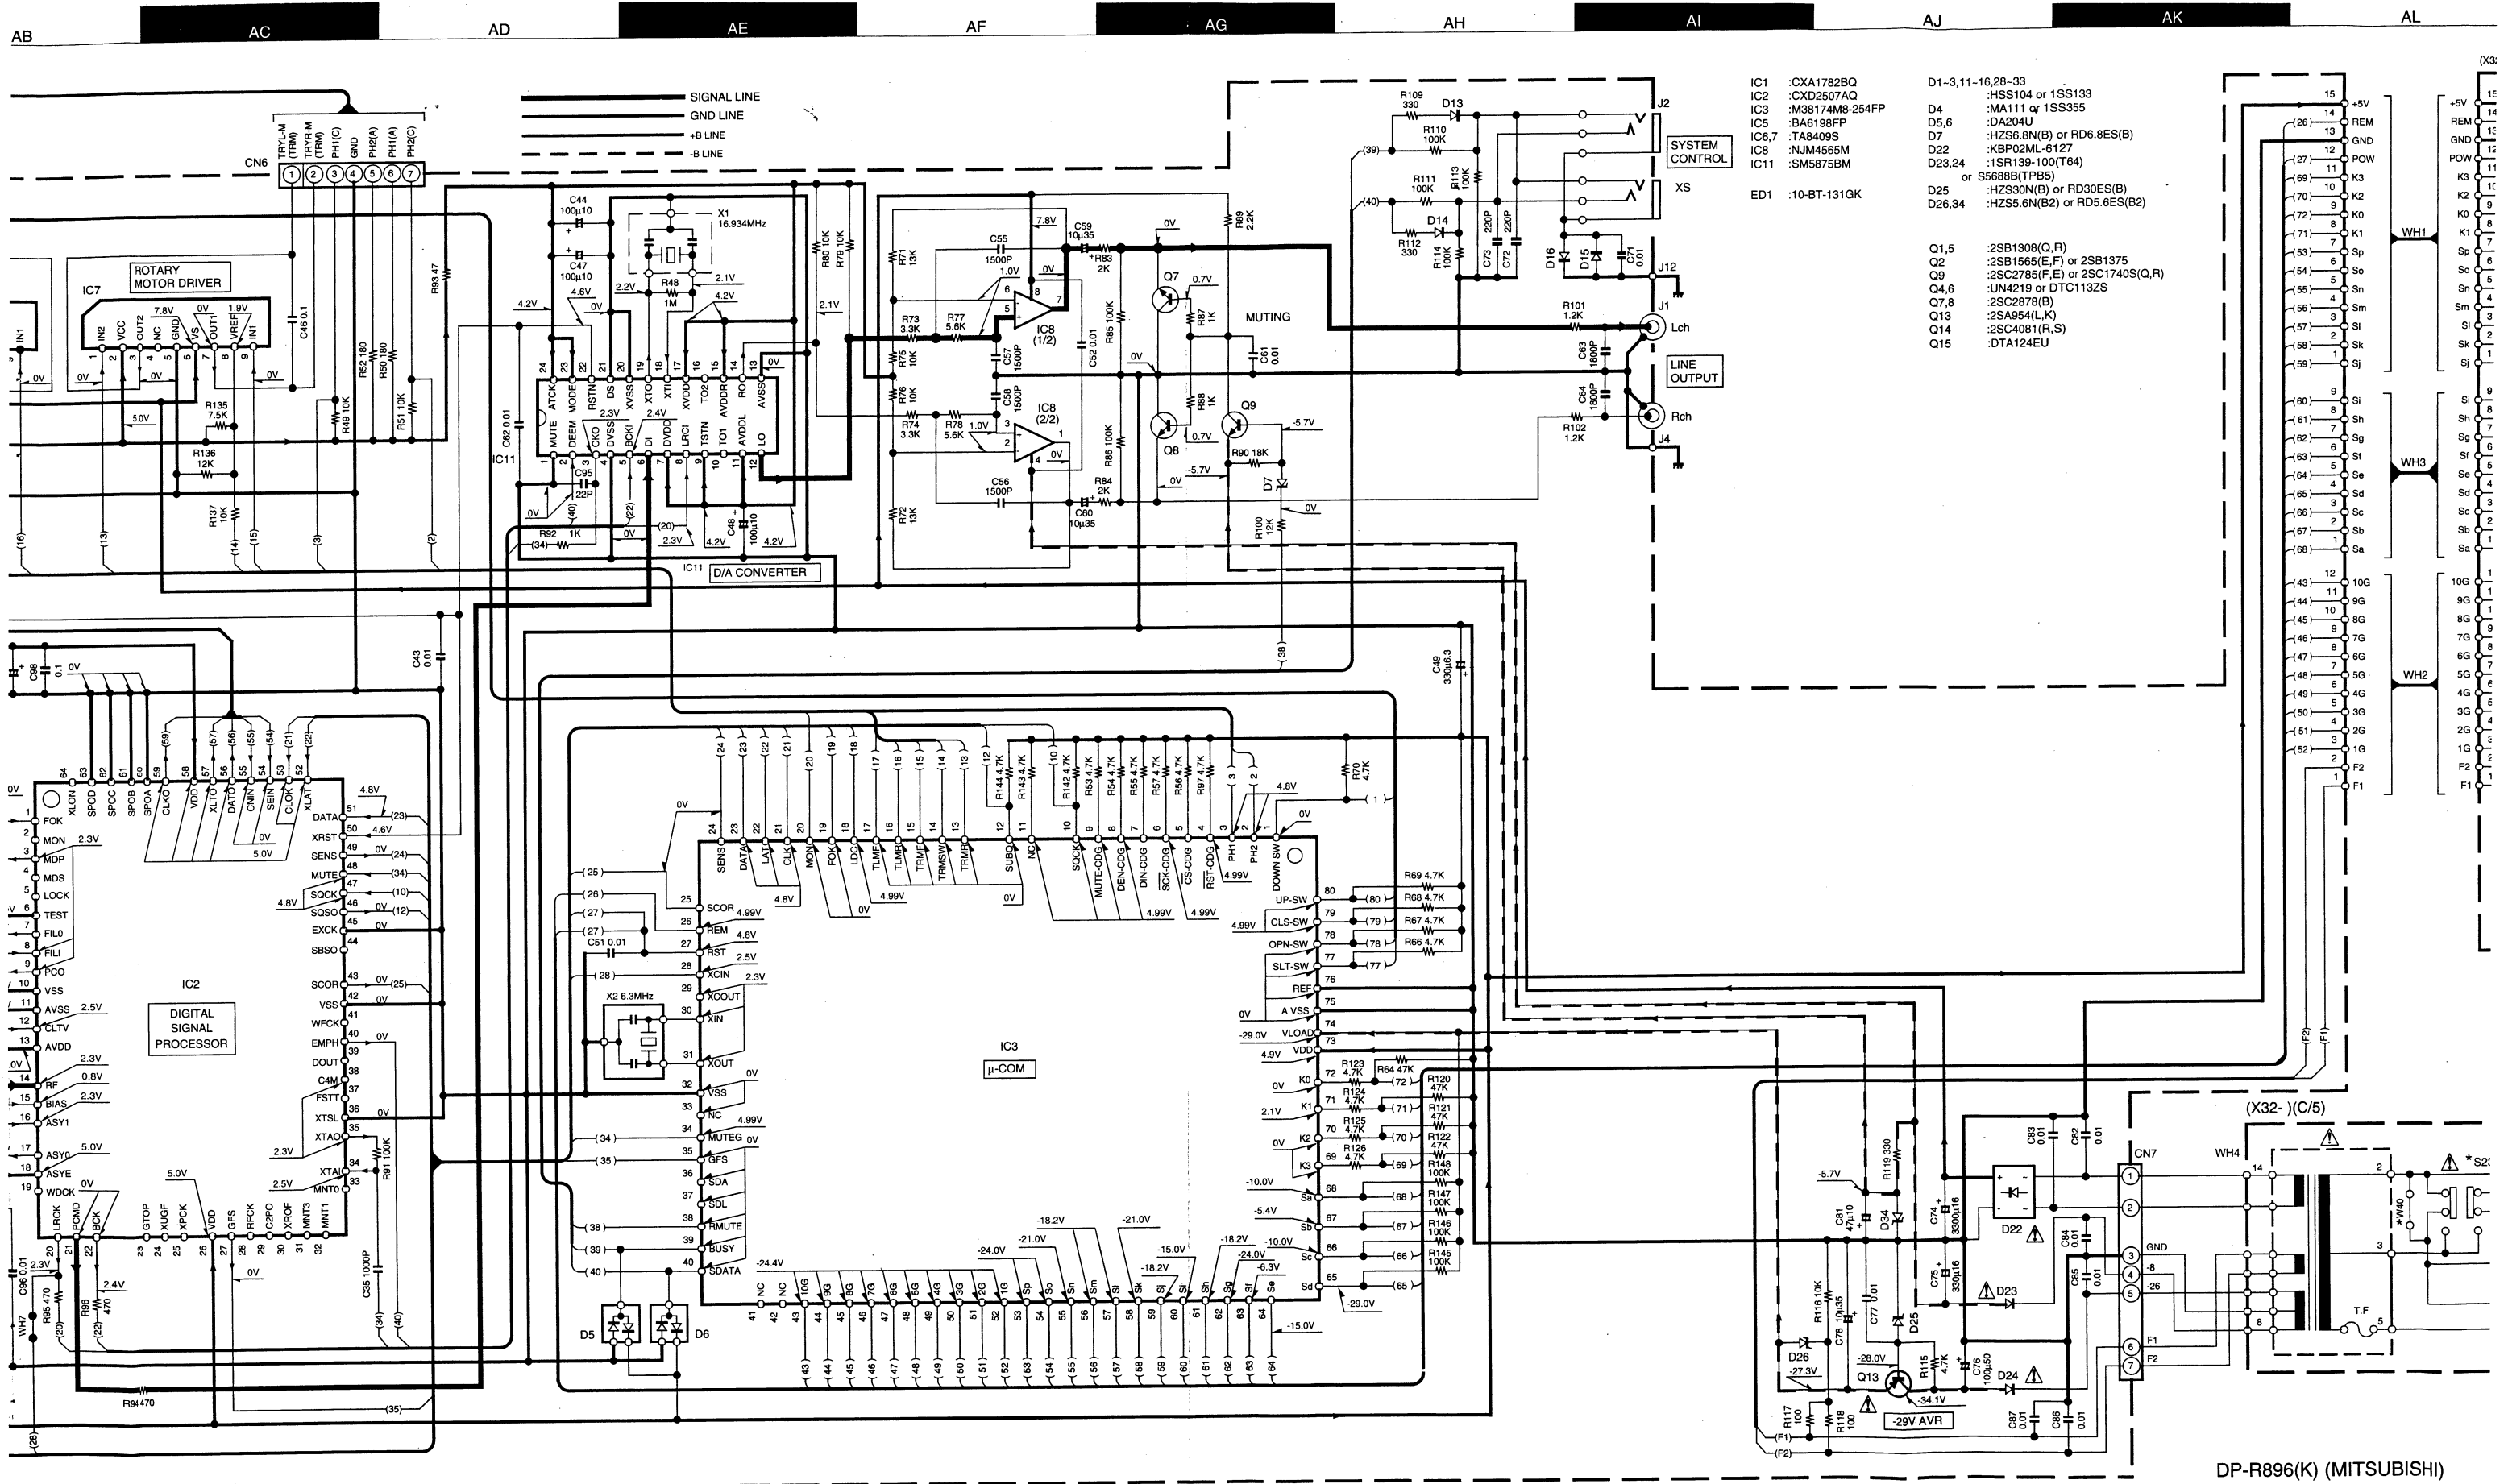

- IC1 :CX1782BQ
IC2 :CXD2507AQ
IC3 :M38174M8-254FP
IC5 :BA6198FP
IC6,7 :TA8409S
IC8 :NJM4565M
IC11 :SM5875BM
ED1 :10-BT-131GK
- D1-3,11-16,28-33 :HSS104 or 1SS133
D4 :MA111 or 1SS355
D5,6 :DA204U
D7 :HZS6.8N(B) or RD6.8ES(B)
D22 :KBP02ML-6127
D23,24 :1SR139-100(T64)
or S5688B(TPB5)
D25 :HZS30N(B) or RD30ES(B)
D26,34 :HZS5.6N(B2) or RD5.6ES(B2)
- Q1,5 :2SB1308(Q,R)
Q2 :2SB1565(E,F) or 2SB1375
Q3 :2SC2785(F,E) or 2SC1740S(Q,R)
Q4,8 :UN4219 or DTC113ZS
Q7,9 :2SC2878(B)
Q13 :2SA954(L,K)
Q14 :2SC4081(R,S)
Q15 :DTA124EU

DP-R896(K) (MITSUBISHI)

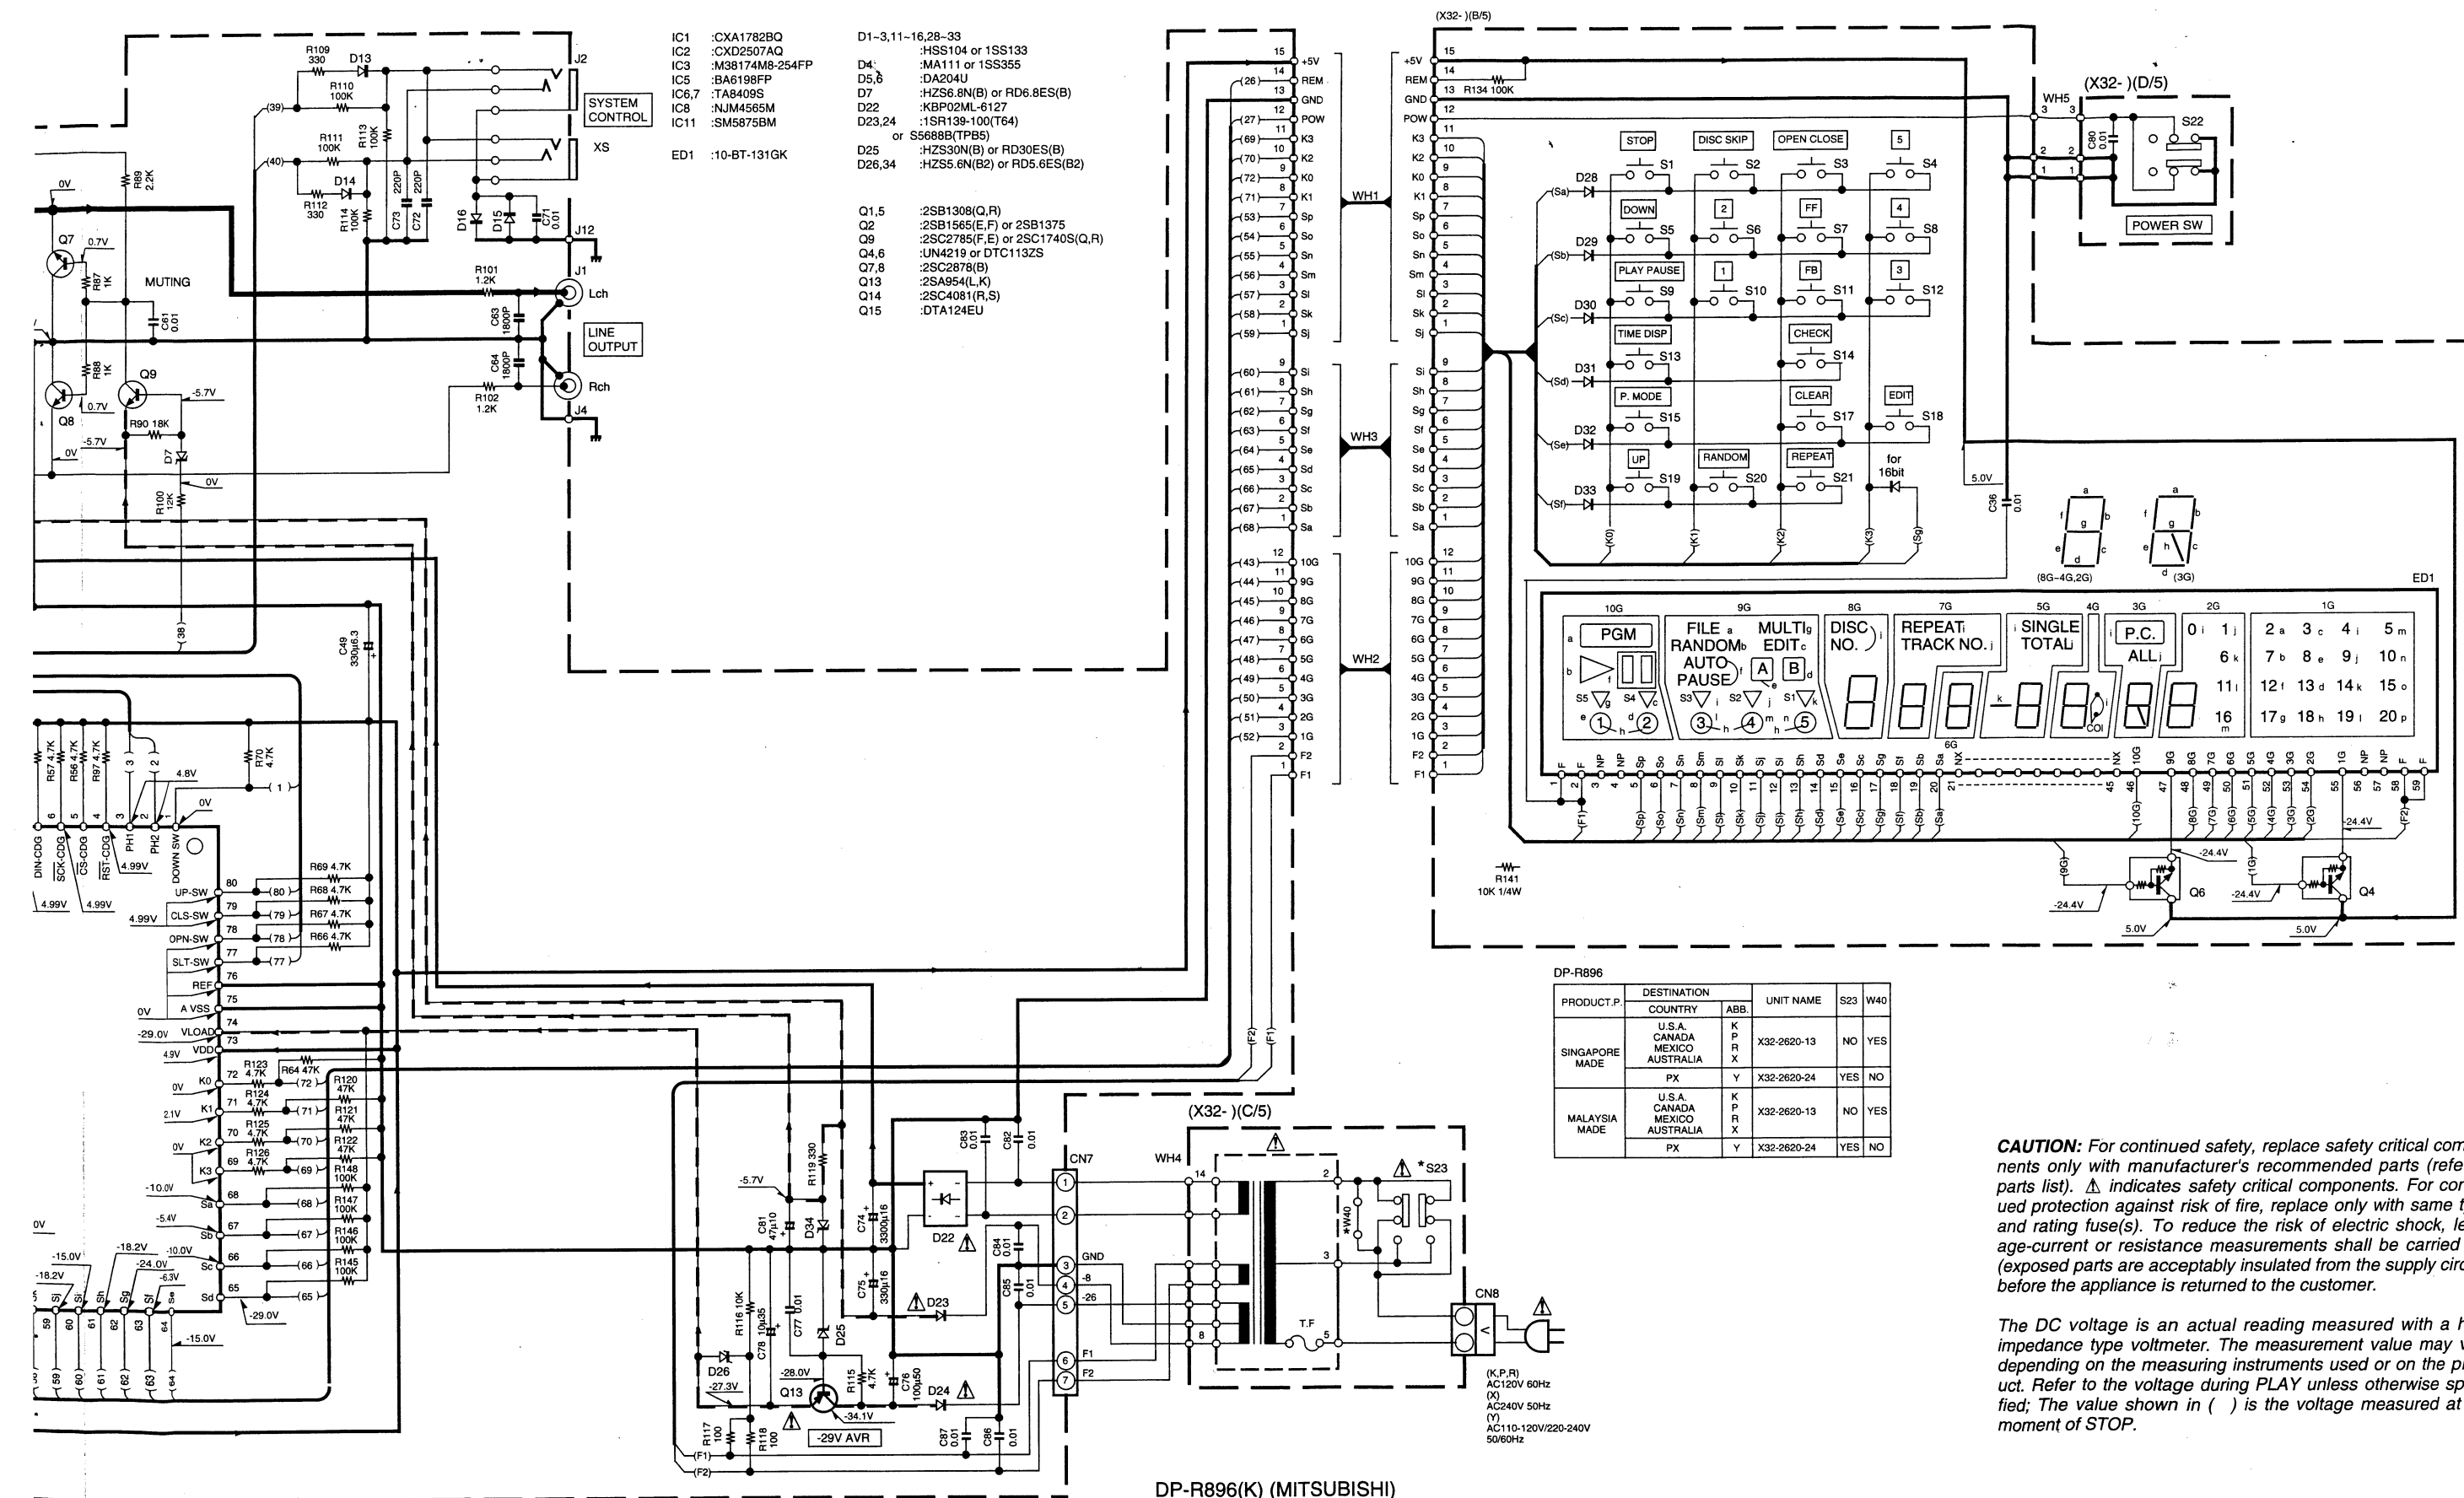

DP-R896(K) (MITSUBISHI)


DP-R896

KENWOOD


Y22-4450-10

EXPLODED VIEW(MECHANISM)


EXPLODED V

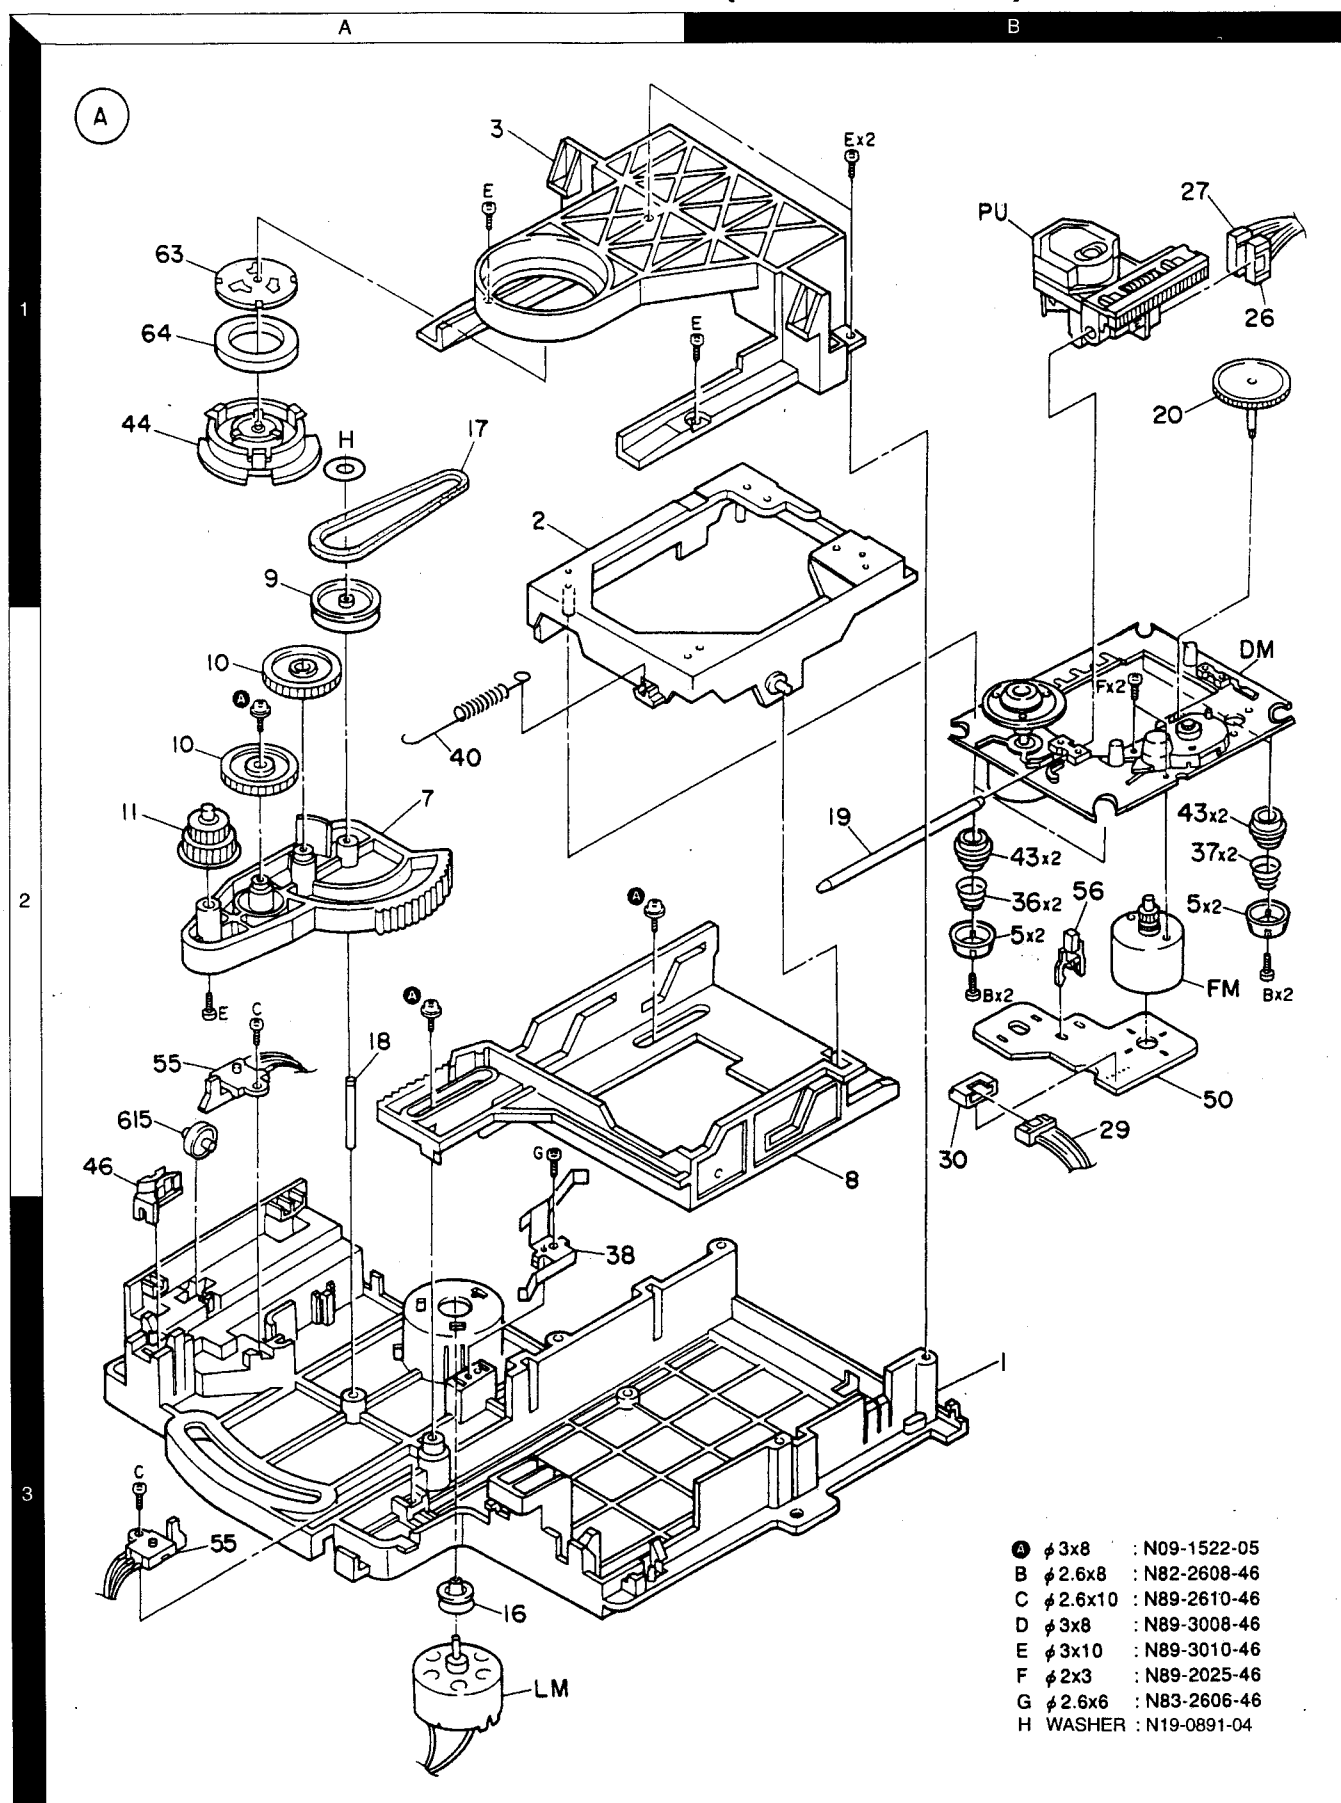

Parts with the exploded numbers larger than 700 are not supplied.

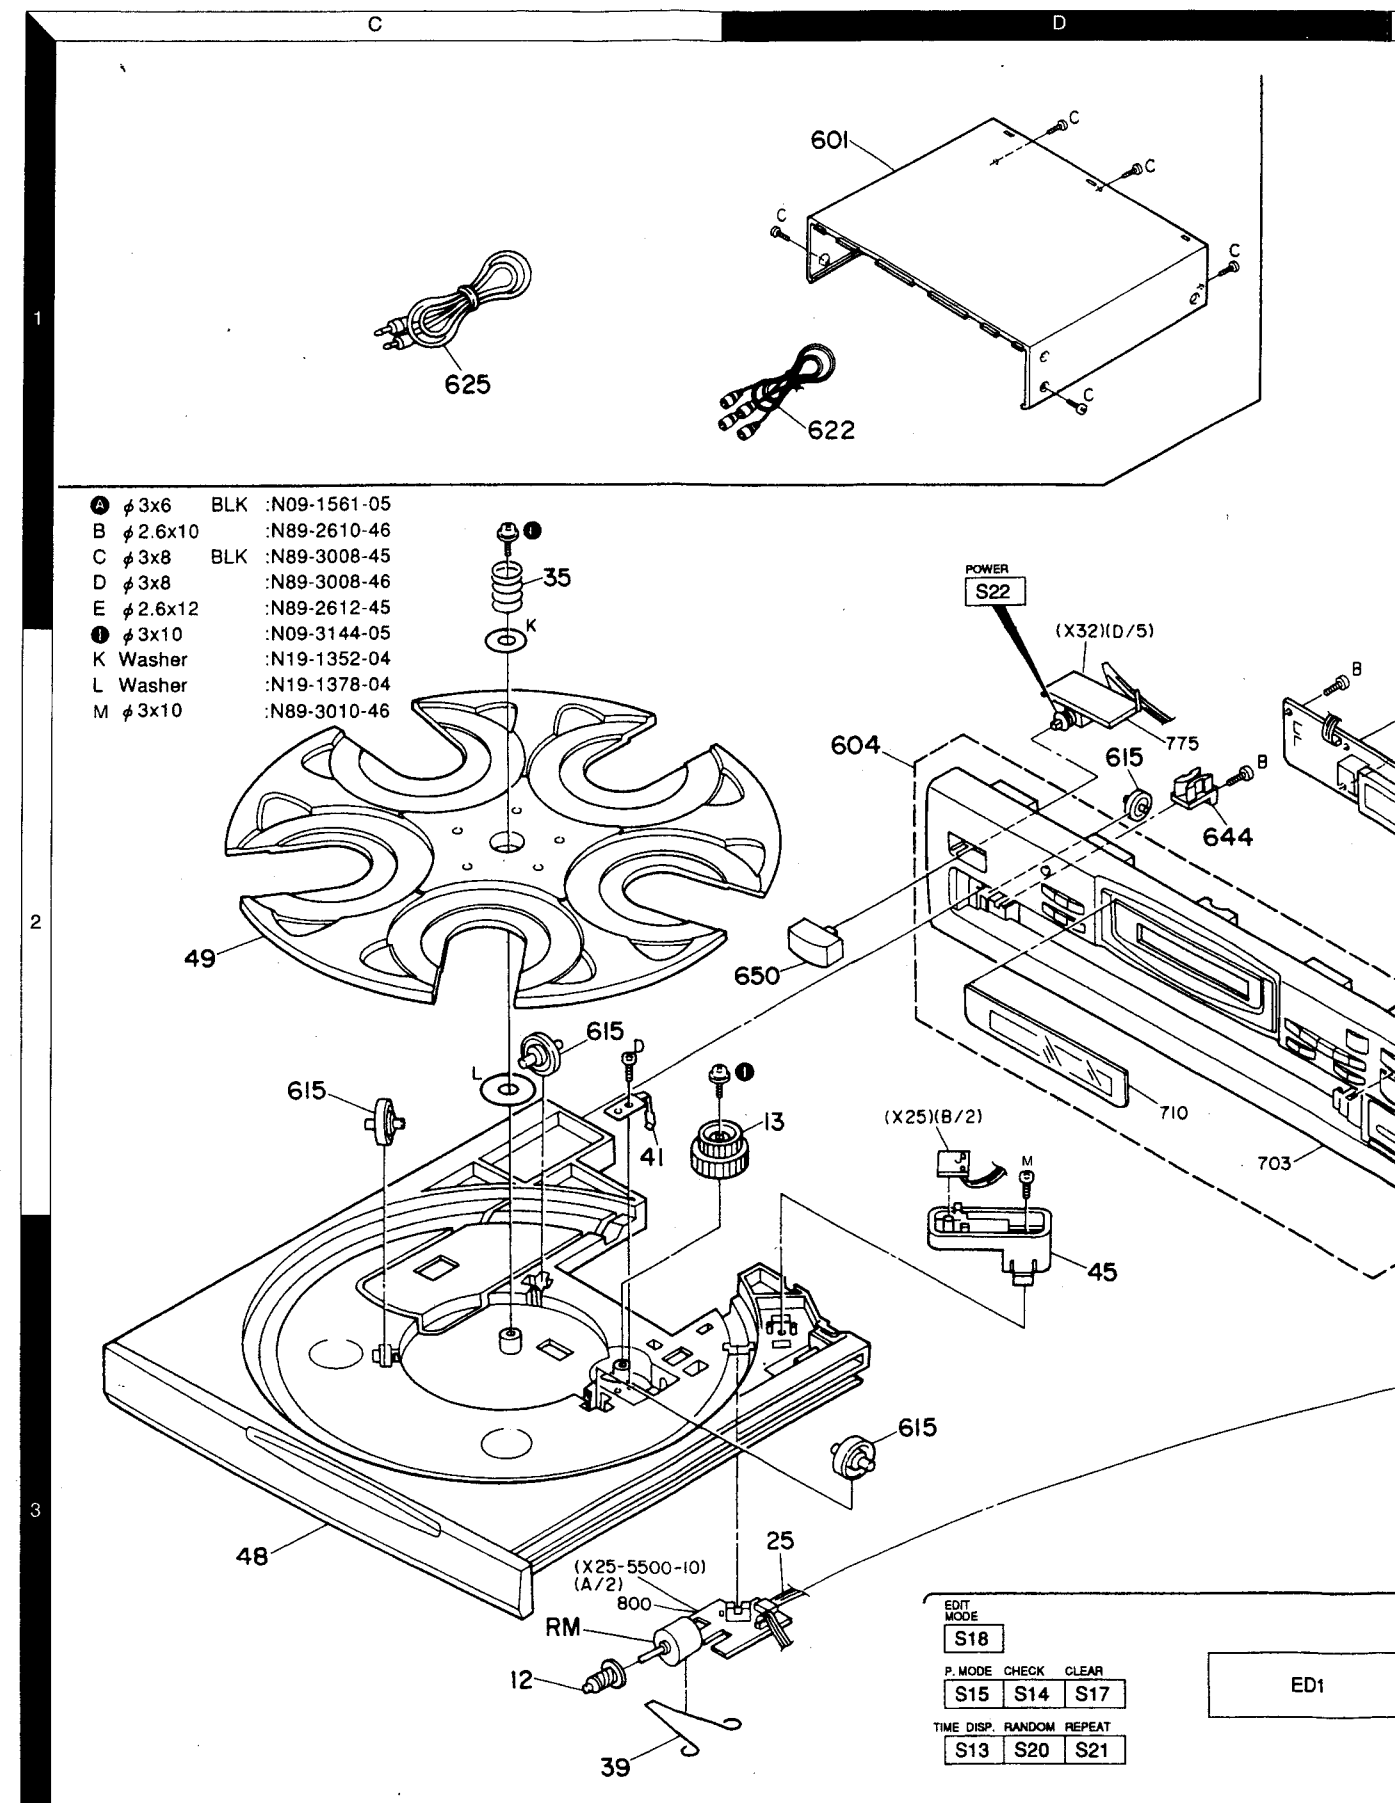


Parts with the exploded numbers larger than 700 are not supplied.

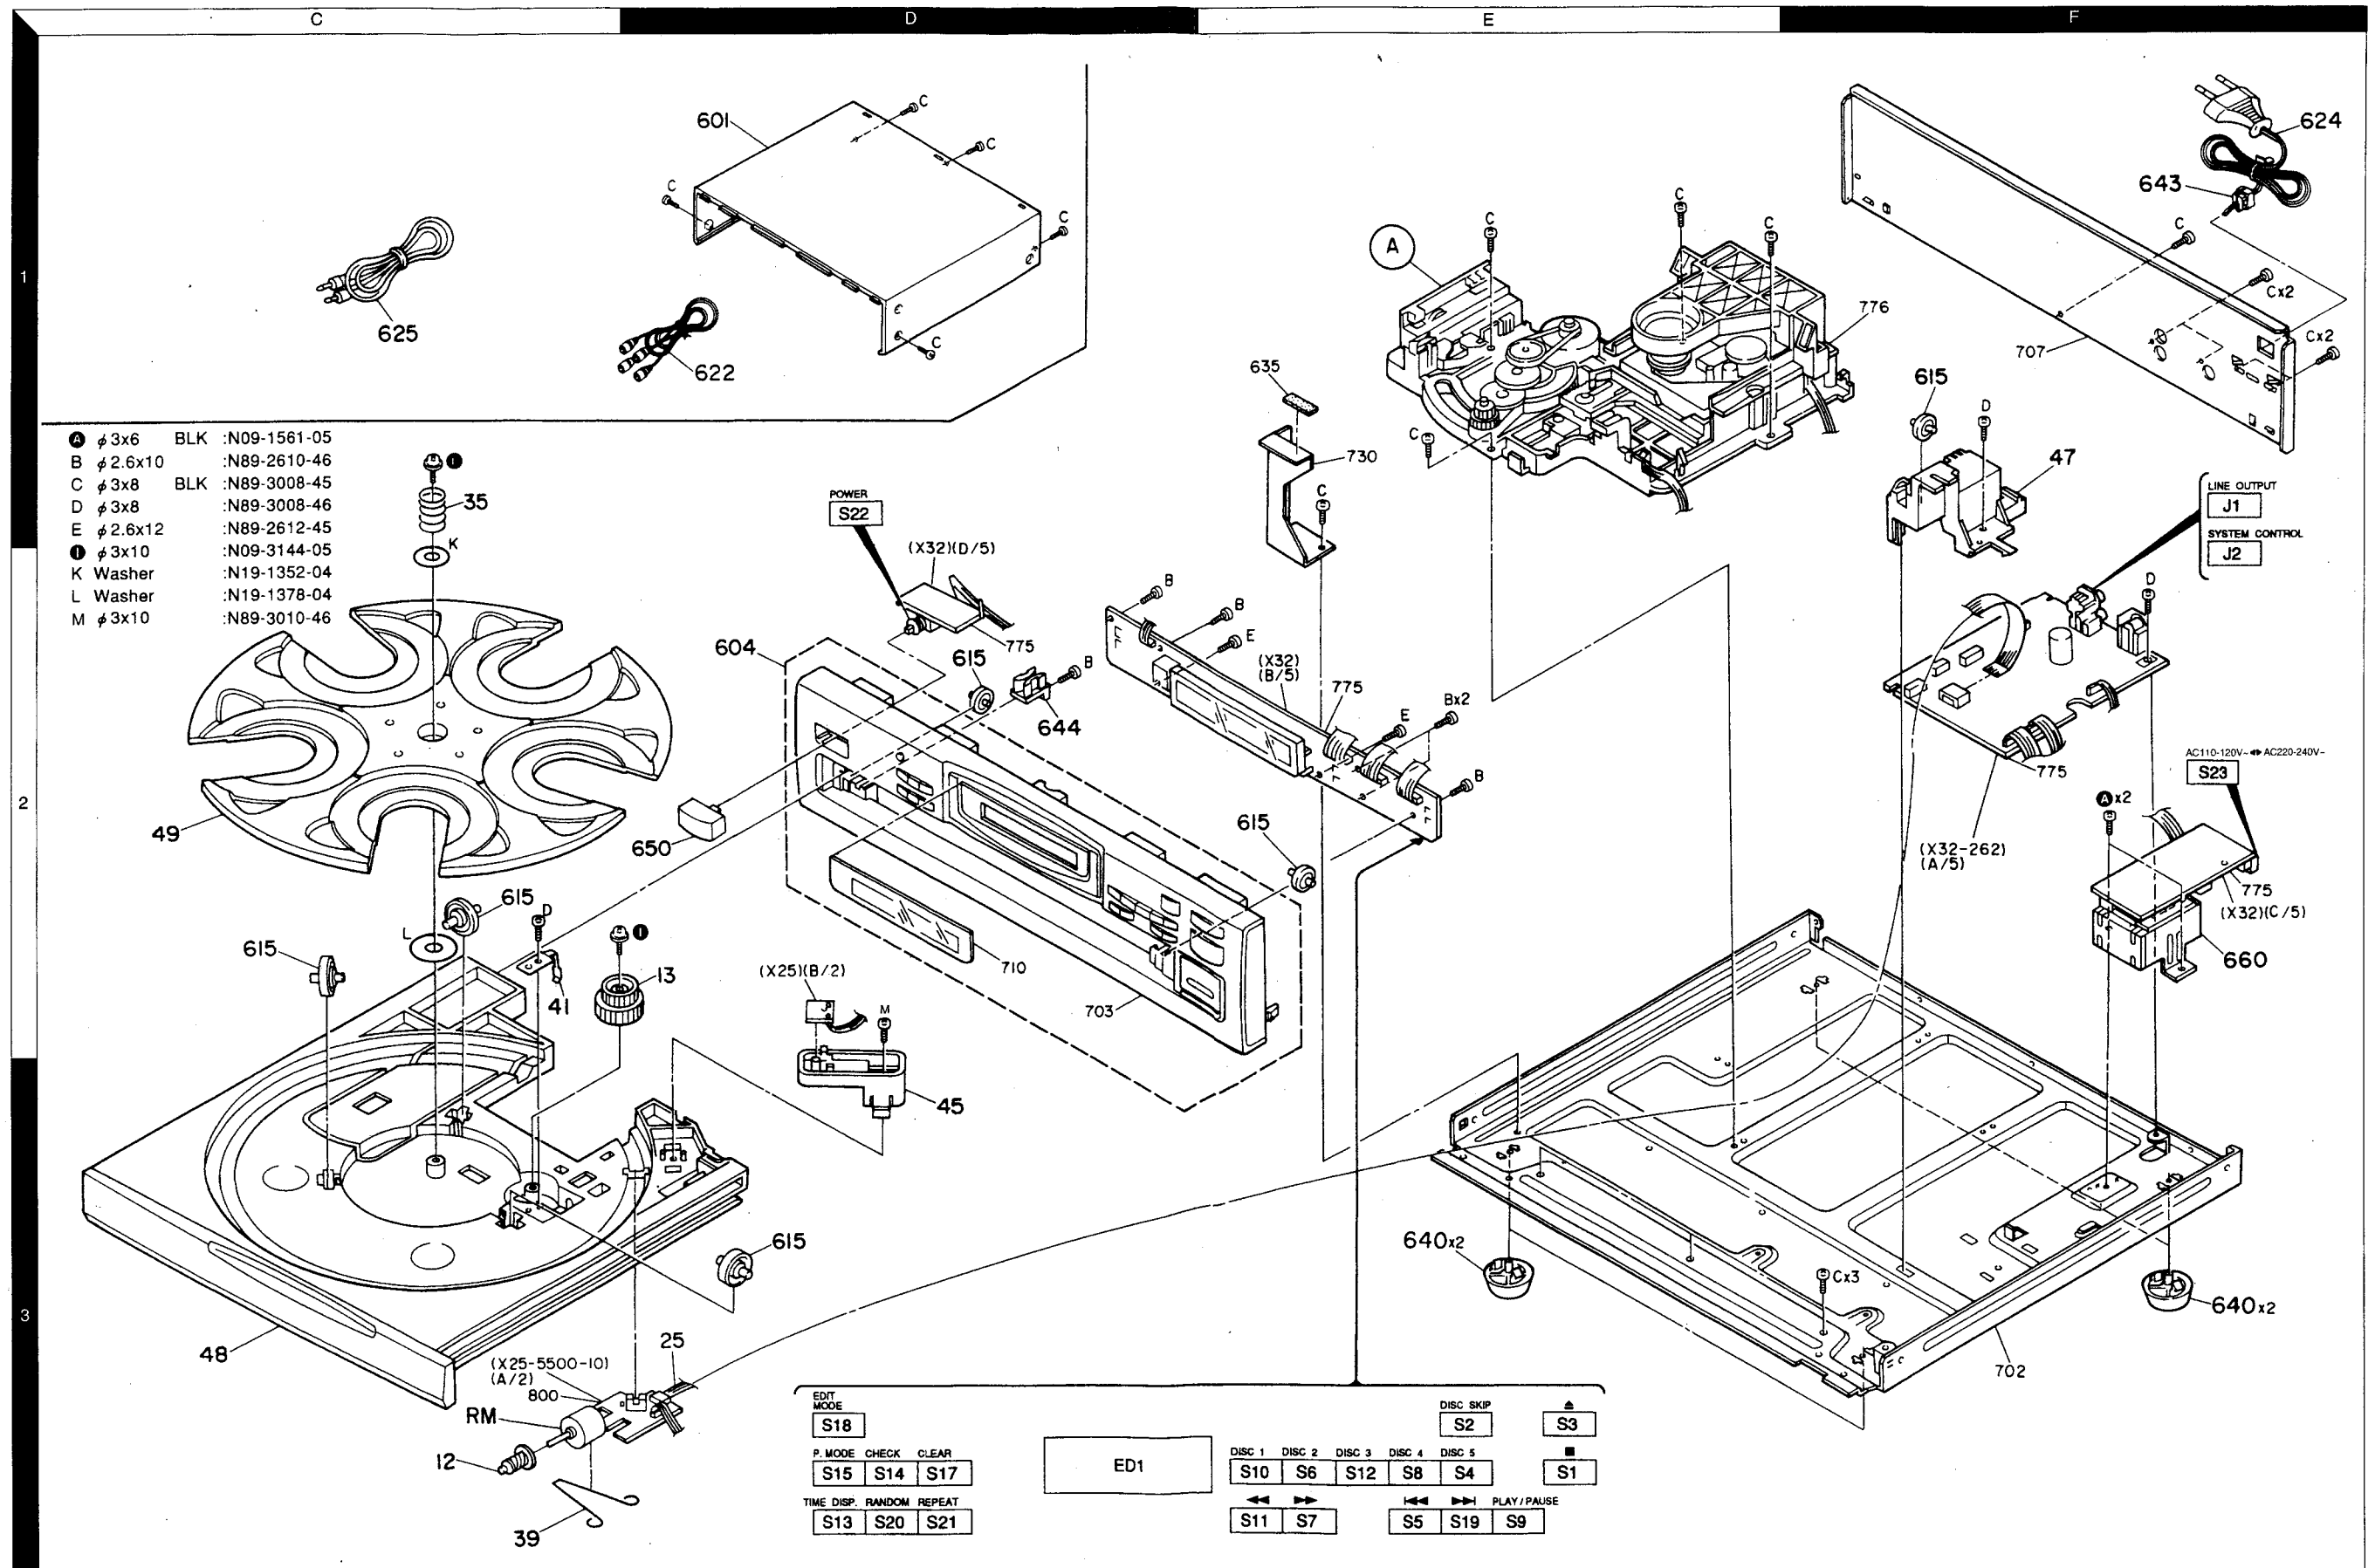


*New Parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No	Add-ress	New Parts	Parts No.	Description	Desti-nation	Re-marks
DP-R896						
601 604	1D 2D	*	A01-3103-11 A60-0872-02	METALLIC CABINET PANEL ASSY		
		*	B46-0092-43 B46-0096-53 B46-0121-33 B46-0197-00 B58-0513-04	WARRANTY CARD WARRANTY CARD WARRANTY CARD QUESTIONNAIRE CARD CAUTION CARD(PRESET220-240)	KY X P K Y	
		*	B58-0964-13 B58-0965-13 B58-0967-03 B58-1505-03 B59-1104-00	CAUTION CARD(UL) CAUTION CARD(TX TYPE PL) CAUTION CARD(P TYPE PL) CAUTION CARD SERVICE DIRECTORY	KY X P K Y	
		*	B60-2539-00 B60-2540-00	INSTRUCTION MANUAL (EN) INSTRUCTION MANUAL (FR)	PYX P	
615	2D,2E		D14-0357-04	ROLLER		
622 624 624 624 625	1D 1F 1F 1F 1C		E30-0505-05 E30-2605-05 E30-2650-05 E30-2717-05 E30-2735-05	AUDIO CORD AC POWER CORD AC POWER CORD AC POWER CORD CORD WITH PLUG	Y KP X	
635	1E		G11-2199-04	CUSHION		
		*	H10-5688-02 H10-5689-12 H10-5753-02 H10-5754-12 H12-2210-04	POLYSTYRENE FOAMED FIXTURE (L) POLYSTYRENE FOAMED FIXTURE (R) POLYSTYRENE FOAMED FIXTURE (L) POLYSTYRENE FOAMED FIXTURE (R) PACKING FIXTURE		S S W W
		*	H13-0152-14 H21-0303-04 H25-0232-04 H25-0368-04 H50-1795-04	CARTON BOARD PROTECTION SHEET PROTECTION BAG (235X350X0.03) PROTECTION BAG ITEM CARTON CASE	X	W
		*	H50-1936-04	ITEM CARTON CASE		S
640 643 644	3E,3F 1F 2D		J02-0366-15 J42-0083-05 J90-0811-04 J61-0307-05	FOOT POWER CORD BUSHING GUIDE WIRE BAND	YX	
650	2D		K27-2112-04	KNOB (POWER)		
660 660 660	2F 2F 2F		L07-0858-05 L07-0859-05 L07-0860-05	POWER TRANSFORMER POWER TRANSFORMER POWER TRANSFORMER	KP Y X	
MECHANISM PCB (X25-5500-10)						
CN1			E40-4187-05	FLAT CABLE CONNECTOR		
PH1			T95-0132-05	OPTO ISOLATOR		
D1 PH2			SIR-33ST3 RPT-38PT3F	INFRARED LED PHOTO TRANSISTOR		
CD PLAYER UNIT (X32-2620-XX)						
C1			CK73FB1H103K	CHIP C 0.010UF K		

L : Scandinavia K : USA P : Canada R : Mexico S : Singapore made
Y : PX(Far East, Hawaii) T : Europe E : Europe G : Germany W : Malaysia made
Y : AAFES(Europe) X : Australia M : Other Areas  indicates safety critical components.

*New Parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.


Ref. No	Add-ress	New Parts	Parts No.	Description	Desti-nation	Re-marks
C88 C89 C90 C95 C96			CK73FF1C224Z CK73FB1H332K CK73FB1H473K CC73FSL1H220J CK73FB1H103K	CHIP C 0.22UF Z CHIP C 3300PF K CHIP C 0.047UF K CHIP C 22PF J CHIP C 0.010UF K		M
C98 C99			CK73FB1E104K CK45FB1H102K	CHIP C 0.10UF K CERAMIC 1000PF K		
CN1,2 CN3 CN4 CN5 CN6			E40-3252-05 E40-0711-05 E40-3250-05 E40-3252-05 E40-4187-05	PIN ASSY PIN ASSY PIN ASSY PIN ASSY FLAT CABLE CONNECTOR		
CN7 CN8 J1 J2			E40-4297-05 E40-4245-05 E63-0068-15 E11-0188-05	FLAT CABLE CONNECTOR PIN ASSY PHONO JACK(2P) LINE OUTPUT MINIATURE PHONE JACK(2P)S.CONT		
L1 X1 X2			J11-0098-05 L40-1001-17 L78-0299-05 L78-0602-05	WIRE CLAMPER SMALL FIXED INDUCTOR(10UH,K) RESONATOR (16.93M) RESONATOR (6.300M)		M
R1 R2 R3 R4 R5			RK73FB2A910J RK73FB2A102J RK73FB2A101J RK73FB2A334J RK73FB2A203J	CHIP R 91 J 1/10W CHIP R 1.0K J 1/10W CHIP R 100 J 1/10W CHIP R 330K J 1/10W CHIP R 20K J 1/10W		
R6 R7 R8 R10 R11			RK73FB2A334J RK73FB2A473J RK73FB2A154J RK73FB2A101J RK73FB2A684J	CHIP R 330K J 1/10W CHIP R 47K J 1/10W CHIP R 150K J 1/10W CHIP R 100 J 1/10W CHIP R 680K J 1/10W		
R12 R13 R14 R15 R16			RK73FB2A103J RK73FB2A105J RK73FB2A124J RK73FB2A105J RK73FB2A823J	CHIP R 10K J 1/10W CHIP R 1.0M J 1/10W CHIP R 120K J 1/10W CHIP R 1.0M J 1/10W CHIP R 82K J 1/10W		
R17 R18 R19 R20 R21			RK73FB2A104J RK73FB2A223J RK73FB2A183J RK73FB2A514J RK73FB2A104J	CHIP R 100K J 1/10W CHIP R 22K J 1/10W CHIP R 18K J 1/10W CHIP R 510K J 1/10W CHIP R 100K J 1/10W		
R22 R23,24 R25 R26 R27			RK73FB2A244J RK73FB2A471J RK73FB2A472J RK73FB2A332J RK73FB2A103J	CHIP R 240K J 1/10W CHIP R 470 J 1/10W CHIP R 4.7K J 1/10W CHIP R 3.3K J 1/10W CHIP R 10K J 1/10W		
R28 R29 R30 R31 R32			RK73FB2A513J RK73FB2A100J RK73FB2A162J RK73FB2A243J RK73FB2A392J	CHIP R 51K J 1/10W CHIP R 10 J 1/10W CHIP R 1.6K J 1/10W CHIP R 24K J 1/10W CHIP R 3.9K J 1/10W		
R38 R39 R40			RK73FB2A103J RK73FB2A473J RK73FB2A472J	CHIP R 10K J 1/10W CHIP R 47K J 1/10W CHIP R 4.7K J 1/10W		

L : Scandinavia K : USA P : Canada R : Mexico M : MITSUBISHI TYPE
Y : PX(Far East, Hawaii) T : Europe E : Europe G : Germany N : NEC TYPE
Y : AAFES(Europe) X : Australia M : Other Areas  indicates safety critical components.

*New Parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

*New Parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No	Add-ress	New Parts	Parts No.	Description	Desti-nation	Re-marks
C2 C3 C4 C5 C6			CK73FB1H472K CC73FSL1H470J CK73FF1C474Z CE04LW1A101M CK73FB1E104K	CHIP C 4700PF K CHIP C 47PF J CHIP C 0.47UF Z ELECTRO 100UF 10WV CHIP C 0.10UF K		
C7 C8 C9 C10 C11			CE04HW1HR47M CK73FB1E104K CK73FB1H102K CC73FSL1H221J CK73FB1H333K	NP-ELEC 0.47UF 50WV CHIP C 0.10UF K CHIP C 1000PF K CHIP C 220PF J CHIP C 0.033UF K		
C12 C13,14 C15 C16 C17,18			CC73FSL1H101J CE04HW1E100M CK73FB1H103K CK73FB1H333K CK73FB1H103K	CHIP C 100PF J NP-ELEC 10UF 25WV CHIP C 0.010UF K CHIP C 0.033UF K CHIP C 0.010UF K		
C19 C20 C21,22 C25 C26,27			CE04LW0J331M CK73FB1H103K CC73FSL1H150J CE04LW1A470M CE04LW1A101M	ELECTRO 330UF 6.3WV CHIP C 0.010UF K CHIP C 15PF J ELECTRO 47UF 10WV ELECTRO 100UF 10WV		
C28 C29 C30 C31 C32			CC73FSL1H330J CK73FB1H222K CK73FB1H333K CK73FB1H103K CK73FB1H222K	CHIP C 33PF J CHIP C 2200PF K CHIP C 0.033UF K CHIP C 0.010UF K CHIP C 2200PF K		
C33 C34 C35 C36 C37			CE04LW1A101M CE04LW1H010M CK73FB1H102K CK73FB1H103K CK73FB1H473K	ELECTRO 100UF 10WV ELECTRO 1.0UF 50WV CHIP C 1000PF K CHIP C 0.010UF K CHIP C 0.047UF K		
C38 C39 C40 C41 C42			CK73FB1H152K CK73FB1H103K CE04LW1HR47M CK73FB1H103K CE04LW0J331M	CHIP C 1500PF K CHIP C 0.010UF K ELECTRO 0.47UF 50WV CHIP C 0.010UF K ELECTRO 330UF 6.3WV		
C43 C44 C45,46 C47,48 C49			CK73FB1H103K CE04LW1A101M CK73FB1E104K CE04LW1A101M CE04LW0J331M	CHIP C 0.010UF K ELECTRO 100UF 10WV CHIP C 0.10UF K ELECTRO 100UF 10WV ELECTRO 330UF 6.3WV		
C51,52 C55-58 C59,60 C61,62 C63,64			CK73FB1H103K C93-0028-05 CE04LW1V100M CK73FB1H103K C93-0029-05	CHIP C 0.010UF K CERAMIC CAPACITOR (TYPE 1) ELECTRO 10UF 35WV CHIP C 0.010UF K CERAMIC CAPACITOR (TYPE 1)		
C71 C72,73 C74 C75 C76			CK73FB1H103K CC73FSL1H221J CE04LW1C332M CE04LW1C331M CE04LW1H101M	CHIP C 0.010UF K CHIP C 220PF J ELECTRO 3300UF 16WV ELECTRO 330UF 16WV ELECTRO 100UF 50WV		
C77 C78 C80 C81 C82-87			CK73FB1H103K CE04LW1V100M CK73FB1H103K CE04LW1A470M CK73FB1H103K	CHIP C 0.010UF K ELECTRO 10UF 35WV CHIP C 0.010UF K ELECTRO 47UF 10WV CHIP C 0.010UF K		

L : Scandinavia K : USA P : Canada R : Mexico M : MITSUBISHI TYPE
Y : PX(Far East, Hawaii) T : Europe E : Europe G : Germany N : NEC TYPE
Y : AAFES(Europe) X : Australia M : Other Areas  indicates safety critical components.

PARTS LIST

DP-R896

DP-R896

PARTS LIST

DP-R896

D

*New Parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

3

Ref. No	Add-ress	New Parts	Parts No.	Description	Desti-nation	Re-marks
C88			CK73F1C224Z	CHIP C 0.22UF Z		
C89			CK73FB1H332K	CHIP C 3300PF K		
C90			CK73FB1H473K	CHIP C 0.047UF K		
C95			CC73FSL1H220J	CHIP C 22PF J		
C96			CK73FB1H103K	CHIP C 0.010UF K		M
C98			CK73FB1E104K	CHIP C 0.10UF K		
C99			CK45FB1H102K	CERAMIC 1000PF K		
CN1,2			E40-3252-05	PIN ASSY		
CN3			E40-0711-05	PIN ASSY		
CN4			E40-3250-05	PIN ASSY		
CN5			E40-3252-05	PIN ASSY		
CN6			E40-4187-05	FLAT CABLE CONNECTOR		
CN7			E40-4297-05	FLAT CABLE CONNECTOR		
CN8			E40-4245-05	PIN ASSY		
J1			E63-0068-15	PHONO JACK(2P) LINE OUTPUT		
J2			E11-0188-05	MINIATURE PHONE JACK(2P)S.CONT		
			J11-0098-05	WIRE CLAMPER		
L1			L40-1001-17	SMALL FIXED INDUCTOR(10UH,K)		
X1			L78-0299-05	RESONATOR (16.93M)		
X2			L78-0602-05	RESONATOR (6.300M)		M
R1			RK73FB2A910J	CHIP R 91 J 1/10W		
R2			RK73FB2A102J	CHIP R 1.0K J 1/10W		
R3			RK73FB2A101J	CHIP R 100 J 1/10W		
R4			RK73FB2A334J	CHIP R 330K J 1/10W		
R5			RK73FB2A203J	CHIP R 20K J 1/10W		
R6			RK73FB2A334J	CHIP R 330K J 1/10W		
R7			RK73FB2A473J	CHIP R 47K J 1/10W		
R8			RK73FB2A154J	CHIP R 150K J 1/10W		
R10			RK73FB2A101J	CHIP R 100 J 1/10W		
R11			RK73FB2A684J	CHIP R 680K J 1/10W		
R12			RK73FB2A103J	CHIP R 10K J 1/10W		
R13			RK73FB2A105J	CHIP R 1.0M J 1/10W		
R14			RK73FB2A124J	CHIP R 120K J 1/10W		
R15			RK73FB2A105J	CHIP R 1.0M J 1/10W		
R16			RK73FB2A823J	CHIP R 82K J 1/10W		
R17			RK73FB2A104J	CHIP R 100K J 1/10W		
R18			RK73FB2A223J	CHIP R 22K J 1/10W		
R19			RK73FB2A183J	CHIP R 18K J 1/10W		
R20			RK73FB2A514J	CHIP R 510K J 1/10W		
R21			RK73FB2A104J	CHIP R 100K J 1/10W		
R22			RK73FB2A244J	CHIP R 240K J 1/10W		
R23,24			RK73FB2A471J	CHIP R 470 J 1/10W		
R25			RK73FB2A472J	CHIP R 4.7K J 1/10W		
R26			RK73FB2A332J	CHIP R 3.3K J 1/10W		
R27			RK73FB2A103J	CHIP R 10K J 1/10W		
R28			RK73FB2A513J	CHIP R 51K J 1/10W		
R29			RK73FB2A100J	CHIP R 10 J 1/10W		
R30			RK73FB2A162J	CHIP R 1.6K J 1/10W		
R31			RK73FB2A243J	CHIP R 24K J 1/10W		
R32			RK73FB2A392J	CHIP R 3.9K J 1/10W		
R38			RK73FB2A103J	CHIP R 10K J 1/10W		
R39			RK73FB2A473J	CHIP R 47K J 1/10W		
R40			RK73FB2A472J	CHIP R 4.7K J 1/10W		

L : Scandinavia K : USA P : Canada R : Mexico M : MITSUBISHI TYPE
Y : PX(Far East, Hawaii) T : Europe E : Europe G : Germany N : NEC TYPE
Y : AAFES(Europe) X : Australia M : Other Areas indicates safety critical components.

*New Parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

4

Ref. No	Add-ress	New Parts	Parts No.	Description	Desti-nation	Re-marks
R41			RK73FB2A332J	CHIP R 3.3K J 1/10W		
R42			RK73FB2A103J	CHIP R 10K J 1/10W		
R43			RK73FB2A332J	CHIP R 3.3K J 1/10W		
R44			RK73FB2A105J	CHIP R 1.0M J 1/10W		
R45			RK73FB2A104J	CHIP R 100K J 1/10W		
R46			RK73FB2A103J	CHIP R 10K J 1/10W		
R47			RK73FB2A102J	CHIP R 1.0K J 1/10W		
R47			RK73FB2A472J	CHIP R 4.7K J 1/10W		
R48			RK73FB2A105J	CHIP R 1.0M J 1/10W		
R49			RK73FB2A103J	CHIP R 10K J 1/10W		
R50			RK73FB2A181J	CHIP R 180 J 1/10W		
R51			RK73FB2A103J	CHIP R 10K J 1/10W		
R52			RK73FB2A181J	CHIP R 180 J 1/10W		
R53-57			RK73FB2A222J	CHIP R 2.2K J 1/10W		
R53-57			RK73FB2A472J	CHIP R 4.7K J 1/10W		
R60-62			RK73FB2A472J	CHIP R 4.7K J 1/10W		
R64			RK73FB2A473J	CHIP R 47K J 1/10W		
R66-70			RK73FB2A472J	CHIP R 4.7K J 1/10W		
R71,72			RK73FB2A133J	CHIP R 13K J 1/10W		
R73,74			RK73FB2A332J	CHIP R 3.3K J 1/10W		
R75,76			RK73FB2A103J	CHIP R 10K J 1/10W		
R77,78			RK73FB2A562J	CHIP R 5.6K J 1/10W		
R79,80			RK73FB2A103J	CHIP R 10K J 1/10W		
R83,84			RK73FB2A202J	CHIP R 2.0K J 1/10W		
R85,86			RK73FB2A104J	CHIP R 100K J 1/10W		
R87,88			RK73FB2A102J	CHIP R 1.0K J 1/10W		
R89			RK73FB2A222J	CHIP R 2.2K J 1/10W		
R90			RK73FB2A183J	CHIP R 18K J 1/10W		
R91			RK73FB2A104J	CHIP R 100K J 1/10W		
R92			RK73FB2A102J	CHIP R 1.0K J 1/10W		
R93			RK73FB2A470J	CHIP R 47 J 1/10W		
R94-96			RK73FB2A471J	CHIP R 470 J 1/10W		
R97			RK73FB2A222J	CHIP R 2.2K J 1/10W		
R97			RK73FB2A472J	CHIP R 4.7K J 1/10W		
R98			RK73FB2A472J	CHIP R 4.7K J 1/10W		
R99			RS14KB3D820J	FL-PROOF RS 82 J 2W		
R100			RK73FB2A123J	CHIP R 12K J 1/10W		
R101,102			RK73FB2A122J	CHIP R 1.2K J 1/10W		
R109			RK73FB2A331J	CHIP R 330 J 1/10W		
R110,111			RK73FB2A104J	CHIP R 100K J 1/10W		
R112			RK73FB2A331J	CHIP R 330 J 1/10W		
R113,114			RK73FB2A104J	CHIP R 100K J 1/10W		
R115			RK73FB2A472J	CHIP R 4.7K J 1/10W		
R116			RK73FB2A103J	CHIP R 10K J 1/10W		
R117,118			RK73FB2A101J	CHIP R 100 J 1/10W		
R119			RK73FB2A331J	CHIP R 330 J 1/10W		
R120-122			RK73FB2A473J	CHIP R 47K J 1/10W		
R123-126			RK73FB2A472J	CHIP R 4.7K J 1/10W		
R127			RK73FB2A222J	CHIP R 2.2K J 1/10W		
R128			RK73FB2A102J	CHIP R 1.0K J 1/10W		
R129			RK73FB2A105J	CHIP R 1.0M J 1/10W		
R130			RK73FB2A224J	CHIP R 220K J 1/10W		
R131			RK73FB2A912J	CHIP R 9.1K J 1/10W		
R132			RK73FB2A102J	CHIP R 1.0K J 1/10W		
R133			RK73FB2A203J	CHIP R 20K J 1/10W		

L : Scandinavia K : USA P : Canada R : Mexico M : MITSUBISHI TYPE
Y : PX(Far East, Hawaii) T : Europe E : Europe G : Germany N : NEC TYPE
Y : AAFES(Europe) X : Australia M : Other Areas indicates safety critical components.

*New Parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

5

Ref. No	Add-ress	New Parts	Parts No.	Description	Desti-nation	Re-marks
R134			RK73FB2A104J	CHIP R 100K J 1/10W		
R135			RK73FB2A752J	CHIP R 7.5K J 1/10W		
R136			RK73FB2A123J	CHIP R 12K J 1/10W		
R137			RK73FB2A103J	CHIP R 10K J 1/10W		
R138			RK73FB2A124J	CHIP R 120K J 1/10W		
R139			RK73FB2A394J	CHIP R 390K J 1/10W		
R142-144			RK73FB2A472J	CHIP R 4.7K J 1/10W		
R145-148			RK73FB2A104J	CHIP R 100K J 1/10W		
VR1			R12-3687-05	TRIMMING POT.(33K)		
VR2			R12-3685-05	TRIMMING POT.(10K)		
VR3			R12-3688-05	TRIMMING POT.(47K)		
VR4			R12-3685-05	TRIMMING POT.(10K)		
W151			R92-0670-05	CHIP R 0 OHM		
W152-154			R92-0670-05	CHIP R 0 OHM		
S1-15			S40-1064-05	PUSH SWITCH		
S17-21			S40-1064-05	PUSH SWITCH		
S22			S40-2370-05	PUSH SWITCH (POWER)		
S23			S31-2131-05	SLIDE SWITCH (AC VOLTAGE SEL)		
D1-3			HSS104	DIODE		
D1-3			1SS133	DIODE		
D4			MA111	DIODE		
D4			1SS355	DIODE		
D5,6			DA204U	DIODE		
D7			HZS6.8N(B2)	ZENER DIODE		
D7			RD6.8ES(B2)	ZENER DIODE		
D11-16			HSS104	DIODE		
D11-16			1SS133	DIODE		
D22			KBP02ML-6127	DIODE		
D23,24			S5688B(TPB5)	DIODE		
D23,24			1SR139-100(T64	DIODE		
D25			HZS30N(B)	ZENER DIODE		
D25			RD30ES(B)	ZENER DIODE		
D26			HZS5.6N(B2)	ZENER DIODE		
D26			RD5.6ES(B2)	ZENER DIODE		
D28-33			HSS104	DIODE		
D28-33			1SS133	DIODE		
D34			HZS5.6N(B2)	ZENER DIODE		
D34			RD5.6ES(B2)	ZENER DIODE		
ED1			10-BT-131GK	INDICATOR TUBE		
IC1			CXA1782BQ	MOS-IC		
IC2			CXD2507AQ	MOS-IC		
IC3			M38174M8-254FP	MEMORY IC (MITSUBISHI TYPE)		
IC3			UPD78043GF-068	MEMORY IC (NEC TYPE)		
IC5			BA6198FP	ANALOGUE IC		
IC6,7			TA8409S	IC(MOTOR CONTROL)		
IC8			NJM4565M	IC(OP AMP X2)		
IC11			SM5875BM	MOS-IC		
Q1			2SB1308(Q,R)	TRANSISTOR		
Q2			2SB1375	TRANSISTOR		
Q2			2SB1565(E,F)	TRANSISTOR		
Q4			DTC113ZS	DIGITAL TRANSISTOR		
Q4			UN4219	TRANSISTOR		
Q5			2SB1308(Q,R)	TRANSISTOR		
Q6			DTC113ZS	DIGITAL TRANSISTOR		
Q6			UN4219	TRANSISTOR		

L : Scandinavia K : USA P : Canada R : Mexico M : MITSUBISHI TYPE
Y : PX(Far East, Hawaii) T : Europe E : Europe G : Germany N : NEC TYPE
Y : AAFES(Europe) X : Australia M : Other Areas indicates safety critical components.

*New Parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

6


Ref. No	Add-ress	New Parts	Parts No.	Description	Desti-nation	Re-marks
Q7,8 Q9 Q9 Q13			2SC2878(B) 2SC1740S(Q,R) 2SC2785(F,E) 2SA954(L,K)	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR		
Q14 Q15			2SC4081(R,S) DTA124EU	TRANSISTOR DIGITAL TRANSISTOR		
MECHANISM (X92-1930-10/X92-1960-31)						
1 2 3 DM	3B 1A 1A 2B	*	A10-3121-42 A11-1048-12 A11-1017-22 A11-1082-08	CHASSIS ASSY SUB CHASSIS SUB CHASSIS TT CHASSIS ASSY		
5	2B		B09-0250-04	CAP		
7 8 9 10 11	2A 2B 1A 2A 2A		D10-3439-13 D10-3438-12 D13-1577-14 D13-1578-04 D13-1579-04	ARM SLIDER GEAR GEAR GEAR		
12 13 16 17 18	3C 2D 3A 1A 2A		D13-1682-04 D13-1581-04 D15-0359-04 D16-0355-03 D21-1763-04	WORM GEAR PULLEY BELT SHAFT		
19 20	2B 1B		D10-3606-08 D13-1720-08	FEED SHAFT GEAR (A)		
25 26 27 29 30	3D 1B 1B 2B 2B		E35-0747-25 E35-0748-15 E35-0749-15 E35-0751-15 E40-3264-05	FLAT CABLE WIRING HARNESS WIRING HARNESS WIRING HARNESS CONNECTOR (6P)		
35 36 37 38 39	1C 2B 2B 3A 3C		G01-3630-14 G01-3753-04 G01-3754-04 G02-1049-04 G09-0634-04	COMPRESSION SPRING COMPRESSION SPRING (FRONT) COMPRESSION SPRING (REAR) FLAT SPRING WIRE SPRING		
40 41	2A 2C		G01-3697-24 G02-1065-04	EXTENSION SPRING FLAT SPRING		
43 44 45 46 47	2B 1A 3D 2A 1F		J02-1121-04 J11-0198-03 J19-3634-04 J90-0811-04 J90-0810-22	INSULATOR CLAMPER HOLDER GUIDE GUIDE		
48 48 49 50	3C 3C 2C 2B		J99-0568-11 J99-0569-01 J99-0547-01 J70-0827-08	TRAY TRAY TRAY MOTOR PCB		
55 56	2A,3A 2B		S33-2061-05 S74-0038-08	LEVER SWITCH LEAF SWITCH		
63 64 LM FM PU RM	1A 1A 2B 3A 1B 3C		T60-1055-04 T99-0544-15 T42-0817-08 T42-0524-05 T25-0044-08 T42-0670-05	YOKE MAGNET MOTOR GEAR (FEED) DC MOTOR (LOADING) PICKUP (KSS-212A) DC MOTOR (TRAY-ROTARY)		

PARTS DESCRIPTIONS

CAPACITORS


CC 45 TH 1H 220 J
1 2 3 4 5 6

- 1 = Type ... ceramic, electrolytic, etc. 4 = Voltage rating
2 = Shape ... round, square, ect. 5 = Value
3 = Temp. coefficient 6 = Tolerance

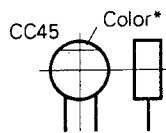

Capacitor value

- 010 = 1pF
100 = 10pF
101 = 100pF
102 = 1000pF = 0.001μF
103 = 0.01μF

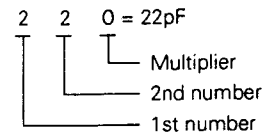

Temperature coefficient

1st Word	C	L	P	R	S	T	U
Color*	Black	Red	Orange	Yellow	Green	Blue	Violet
ppm/°C	0	-80	-150	-220	-330	-470	-750

2nd Word	G	H	J	K	L
ppm/°C	±30	±60	±120	±250	±500

Example : CC45TH = -470 ± 60ppm/°C

Tolerance (More than 10pF)

Code	C	D	G	J	K	M	X	Z	P	No code
(%)	±0.25	±0.5	±2	±5	±10	±20	+40 -20	+80 -20	+100 -0	More than 10μF -10 ~ +50 Less than 4.7μF -10 ~ +75

(Less than 10pF)

Code	B	C	D	F	G
(pF)	±0.1	±0.25	±0.5	±1	±2

Voltage rating

2nd word 1st word	A	B	C	D	E	F	G	H	J	K	V
0	1.0	1.25	1.6	2.0	2.5	3.15	4.0	5.0	6.3	8.0	-
1	10	12.5	16	20	25	31.5	40	50	63	80	35
2	100	125	160	200	250	315	400	500	630	800	-
3	1000	1250	1600	2000	2500	3150	4000	5000	6300	8000	-

Chip capacitors

- (EX) C C 7 3 F S L 1 H 0 0 0 J
1 2 3 4 5 6 7
(Chip) (CH, RH, UJ, SL)
- (EX) C K 7 3 F F 1 H 0 0 0 Z
1 2 3 4 5 6 7
(Chip) (B, F)
- Refer to the table above.
- 1 = Type
2 = Shape
3 = Dimension
4 = Temp. coefficient
5 = Voltage rating
6 = Value
7 = Tolerance

Dimension (Chip capacitors)

Dimension code	L	W	T
Empty	5.6 ± 0.5	5.0 ± 0.5	Less than 2.0
A	4.5 ± 0.5	3.2 ± 0.4	Less than 2.0
B	4.5 ± 0.5	2.0 ± 0.3	Less than 2.0
C	4.5 ± 0.5	1.25 ± 0.2	Less than 1.25
D	3.2 ± 0.4	2.5 ± 0.3	Less than 1.5
E	3.2 ± 0.2	1.6 ± 0.2	Less than 1.25
F	2.0 ± 0.3	1.25 ± 0.2	Less than 1.25
G	1.6 ± 0.2	0.8 ± 0.2	Less than 1.0

RESISTORS

Chip resistor (Carbon)


- (EX) R K 7 3 E B 2 B 0 0 0 J
1 2 3 4 5 6 7
(Chip) (B, F)

Carbon resistor (Normal type)

- (EX) R D 1 4 B B 2 C 0 0 0 J
1 2 3 4 5 6 7

- 1 = Type 5 = Rating wattage
2 = Shape 6 = Value
3 = Dimension 7 = Tolerance
4 = Temp. coefficient

Dimension

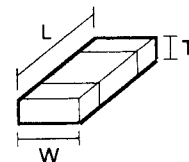

Dimension (Chip resistor)

Dimension code	L	W	T
E	3.2 ± 0.2	1.6 ± 0.2	1.0
F	2.0 ± 0.3	1.25 ± 0.2	1.0
G	1.6 ± 0.2	0.8 ± 0.2	0.5 ± 0.1

Rating wattage

Code	Wattage	Code	Wattage	Code	Wattage
1J	1/16W	2C	1/6W	3A	1W
2A	1/10W	2E	1/4W	3D	2W
2B	1/8W	2H	1/2W		

DP-R896

SPECIFICATIONS

Format

System Compact disc digital audio system
Laser Semiconductor laser
Number of channels 2 channels
Playing rotation 200 rpm ~ 500 rpm (CLV)

D/A converters

D/A conversion 1 bit
Oversampling 8 fs (352.8 kHz)

Audio

Frequency response 4 Hz ~ 20 kHz, ± 1.0 dB
Signal to noise ratio More than 96 dB
Dynamic range More than 94 dB
Total harmonic distortion + noise
..... Less than 0.007 % (at 1 kHz)

Channel separation More than 90 dB (at 1 kHz)
Wow flutter Unmeasurable limit
Output level / impedance
Fixed 2.0 V / 3.3 k Ω

General

Power consumption 10 W
Dimensions W : 440 mm (17-5/16")
H : 128 mm (5-1/16")
D : 392 mm (15-7/16")
Weight (Net) 5.0 kg (11.0 lb)

KENWOOD follows a policy of continuous advancements in development. For this reason specifications may be changed without notice.

Note:

Component and circuitry are subject to modification to insure best operation under differing local conditions. This manual is based on the U.S.A.(K) standard, and provides information on regional circuit modification through use of alternate schematic diagrams, and information on regional component variations through use of parts list.

KENWOOD CORPORATION

14-6, Dogenzaka 1-chome, Shibuya-ku, Tokyo, 150 Japan

KENWOOD SERVICE CORPORATION

P.O. BOX 22745, 2201 East Dominguez St., Long Beach, CA 90801-5745, U.S.A.

KENWOOD ELECTRONICS CANADA INC.

6070 Kestrel Road, Mississauga, Ontario, Canada L5T 1S8

KENWOOD ELECTRONICS LATIN AMERICA S.A.

P.O. BOX 55-2791, Piso 6 plaza Chase, Cl. 47 y Aquilino de la Guardia Panama, Republic de Panama

TRIO-KENWOOD U.K. LIMITED

KENWOOD House, Dwight Road, Watford, Herts., WD1 8EB., United Kingdom

KENWOOD ELECTRONICS BENELUX N.V.

Meachelsesteenweg 418, B-1930 Zaventem, Belgium

KENWOOD ELECTRONICS DEUTSCHLAND GMBH

Rembrücker Str. 15, 63150 Heusenstamm, Germany

TRIO-KENWOOD FRANCE S.A.

13 Boulevard Ney, 75018 Paris, France

KENWOOD ELECTRONICS ITALIA S.p.A.

Via G. Sirtori, 7/9 20129, Milano, Italy

KENWOOD IBERICA S.A.

Bolivia, 239-08020 Barcelona, Spain

KENWOOD ELECTRONICS AUSTRALIA PTY. LTD. (A.C.N. 001499 074)

P.O. Box 504, 8 Figtree Drive, Australia Centre, Homebush, N.S.W. 2140, Australia

KENWOOD & LEE ELECTRONICS, LTD.

Unit 3712-3724, Level 37, Tower 1, Metropia Plaza, 223 Hing Fong Road, Kwai Fong N.T., Hong Kong

KENWOOD ELECTRONICS SINGAPORE PTE LTD.

No. 1 Genting Lane # 07-00, KENWOOD Building, Singapore, 1334

KENWOOD ELECTRONICS (MALAYSIA) SDN BHD

10th Floor, Block B, Wisma Semantan, No. 12 Jalan Gelenggang, Bukit Damansara, 50490 Kuala Lumpur, Malaysia